



Installation and Maintenance Manual

hypercharger HYC400 (100 kW – 400 kW)

Ultra-fast charging system for electric vehicles

for HW version 4



manuel.palm@baywa-re.com
23.02.2024 14:00:29

This page is intentionally left blank.

Installation and Maintenance Manual

Version

Version 2-6 of Installation and Maintenance Manual, 23/11/2023

English Translation of the original German version

© 2023 alpitronic Srl

All rights reserved. Reproduction of this document, even in part, is only permitted with the approval of alpitronic Srl. Information in this document is subject to change without notice.

Although the contents of this document have been carefully checked for accuracy, errors cannot be completely ruled out. If you discover an error, please inform us via support@hypercharger.it.

Manufacturer

alpitronic Srl

Via di Mezzo ai Piani, 33

39100 Bolzano (BZ)

ITALY

Tel.: +39 0471 1961 000

Fax: +39 0471 1961 451

Homepage: <http://www.hypercharger.it>

E-mail: info@hypercharger.it

Service

alpitronic Srl

Via di Mezzo ai Piani, 33

39100 Bolzano (BZ)

ITALY

Tel.: +39 0471 1961 333

Fax: +39 0471 1961 451

Homepage: <http://www.hypercharger.it>

E-mail: support@hypercharger.it

This manual contains important instructions that must be followed during installation and maintenance of the device. It is imperative to consider the following points:

Notice



Warranty claims:

Please note that all warranty claims will be void if you ignore the contents of this installation and maintenance manual.



Changes to the device:

If changes are made to the device that are not included in the documentation from the original manufacturer alpitronic Srl or have not been authorised by alpitronic Srl, alpitronic Srl is no longer considered to be the manufacturer of the switchgear assembly, but rather the person who made the changes.



Updates and revisions:

The information contained in this document is updated regularly and without notice to our customers.

To ensure that you have the latest information, we ask you to register on the document platform hyperdoc using the link below:

<https://account.hypercharger.it/register>



Additional calibration law documentation:

Further documentation is available on hyperdoc for charging stations that have been equipped in accordance with the applicable country-specific measurement and calibration laws. This must be considered.

Table of contents

1. Important safety instructions for installation and maintenance	9
2. Intended use	15
3. Target group.....	16
3.1. Requirements for the charge point operator CPO.....	16
3.2. Requirements for installation, commissioning and maintenance.....	16
4. Product description.....	17
4.1. Charging interfaces	19
4.2. Granularity	25
4.3. Exterior view	26
4.3.1. Type plate	27
4.4. Opening the hypercharger.....	28
4.5. Interior view.....	31
4.6. Circuit diagram.....	35
4.7. Main components.....	37
4.7.1. SiC Power-Stack.....	37
4.7.2. Input switchgear.....	41
4.7.3. Output switchgear	42
4.7.4. CTRL_COM	44
4.7.5. Display including RFID reader.....	46
4.7.6. CTRL_EXT.....	47
4.8. Additional options.....	48
4.8.1. Cooling unit.....	48
4.8.2. Emergency stop switch	49
4.8.2.1. External emergency stop.....	49
4.8.3. Crash Sensor	50
4.8.4. Door contact switch.....	51
4.8.5. Credit card terminal.....	51
4.8.6. Barrier-free hypercharger	51
5. Packaging, transport and storage.....	52
5.1. Packaging	52
5.2. Transport and storage	54
5.3. Unpacking the hypercharger	56
6. Mechanical and electrical installation.....	59
6.1. Design of the supply.....	59
6.2. Site preparation.....	61
6.3. Placing the concrete foundation	63
6.4. Fastening the base to the foundation	66
6.5. Preparing the mains cable.....	69
6.6. Attaching the hypercharger to the base.....	70
6.7. Attaching the mains cable	72
6.8. Final steps.....	74
7. Commissioning.....	75
8. Diagnosis and parameterisation	78
9. Error description and correction.....	79

Contents

10.	Preventive Maintenance	80
11.	Reparation and service	83
12.	Disposal	84
13.	Technical data	85
13.1.	General technical data	85
13.2.	Mechanical data	85
13.3.	Electrical Connection Data	85
13.4.	Radio communication	86
13.5.	Typical standby power consumption	86
14.	Declaration of Conformity	87
15.	Table of Figures	91
16.	List of tables	93

This page is intentionally left blank.

1. Important safety instructions for installation and maintenance

KEEP THESE INSTRUCTIONS

This chapter contains all safety instructions that must be observed when installing and maintaining the HYC400. Improper operation due to non-observance of this installation and maintenance manual can result in death, serious injuries or significant property damage. These safety instructions must be read carefully before installing, operating and maintaining the device.

Symbol descriptions:



WARNING

This symbol indicates potential hazards that can result in severe injury or death if not properly followed.



RISK OF ELECTRIC SHOCK

Highlights the potential for electric shock if precautions are not taken.



WARNING OF HOT SURFACES

Indicates areas or parts that can become hot during operation and may cause burns upon contact.



WARNING OF HEAVY WEIGHTS

This symbol indicates components or devices that are heavy and can cause injuries if handled carelessly.



RISK OF CRUSHING

This symbol indicates potential crushing hazards, particularly when installing or transporting equipment.



RISK OF TIPPING

This symbol indicates that stability is at risk and must be secured with additional means (tipping protection).



CO₂ FIRE EXTINGUISHER

This symbol indicates the recommended type of fire extinguisher to use in the event of a fire.



ESD PROTECTION AREA

This symbol indicates certain electronic components that are sensitive to electrostatic discharge and must be protected to prevent damage.



NOTICE

Used to highlight important information about the device or its use, not necessarily related to safety.

WARNING: Serious consequences for non-compliance with regulations



Non-adherence to the instructions contained in this manual may lead to fatal consequences, severe injury, or substantial property damage.

DANGER: High Voltage Hazards

Before you begin installing, dismantling, repairing or replacing components, it is important to note the following points:



- Only certified technicians are authorised to carry out the activities described above.
 - Always ensure that the power supply to the HYC400 is switched off during any work on the hypercharger: to do this, turn off the main switch QB1.
For certain activities, such as replacement of the input switchgear, the main power supply on the transformer cabin must also be switched off (the specific safety measures can be found in the corresponding replacement instructions).
 - Secure the main power supply/main switch from being switched on again using a lock-out/tag-out device.
 - Ensure that unauthorised persons maintain a safe distance from the HYC400, especially when the doors are open.
 - Warning: Even when the circuit breakers are switched off, the HYC400 can still have dangerous residual voltages (up to 1000 V DC). Before removing the protective covers, be sure to allow a **5-minute** hazardous voltage discharge period after disconnecting the HYC400 from its power source.
 - Perform a voltage check to ensure that electrical power is disconnected from the system. Please strictly adhere to the 5 basic safety rules of electrical engineering.
 - After any intervention, ensure that all doors, openings and protective covers on the HYC400 are securely closed and locked.
-

WARNING: Risk of burns due to heated components



Certain components inside the HYC400, e.g. the SiC Power-Stacks, fuses and cables, may exhibit elevated temperatures even after being disconnected from the power supply. Make sure that all components have cooled down sufficiently before starting any work on the hypercharger. Use appropriate safety gloves if necessary.

WARNING: Handling heavy equipment



The HYC400 and some of its components (e.g. SiC Power-Stack, output switchgear) can be very heavy.

- For this reason, always use suitable safety shoes and gloves.
- Use suitable lifting devices, e.g. a crane for lifting the entire charging station (see Chapter 5.2).

WARNING: Risk of crushing



There is a risk of crushing injuries when assembling, disassembling, repairing or replacing components. Always exercise caution. If necessary, use appropriate protective gloves to minimize the risk.

WARNING: Risk of tipping



If the HYC400 is released from its anchoring, there is an increased risk of tipping over. This is particularly the case if the weight is distributed unevenly within the charging station (e.g. uneven distribution of the SiC Power-Stacks or charging cables). Before the hypercharger is removed from its attachment, it must be secured against tipping over, e.g. by attaching the crane hooks to the 4 eyelets on the top of the charging station.

WARNING: Behaviour in the event of a fire

In case of fire



1. If there is an emergency stop switch for the external power supply (e.g. at gas stations), activate it immediately.
 2. The charge point operator CPO should clearly display all emergency procedures, including the location and use of the emergency stop switch.
 3. Alert the fire department immediately. In the event of injuries, the emergency services must be informed immediately. The emergency numbers must be clearly displayed by the charge point operator CPO.
 4. If there is no emergency stop switch, the charge point operator CPO must immediately disconnect the charging station from the external power supply directly at the mains connection point. It is pointed out that the mains disconnection at the mains connection point may only be carried out by authorised and appropriately trained personnel.
 5. Evacuate everyone present at the scene of the fire or instruct them to move away from the danger zone.
 6. Compliance with local fire safety and occupational health regulations ensures that fire-fighting measures are carried out by trained personnel in accordance with the specified standards. The charge point operator CPO must make this information clearly visible. In any case, even in the absence of a corresponding regulation, fire-fighting measures should only be left to trained people.
 7. When fighting fires, always maintain a sufficient safety distance of at least 2 meters from the charging station to minimise the electrical risk. Only use extinguishing agents that are suitable for electrical devices (e.g. a CO₂ fire extinguisher, even water if necessary, whereby the distance of the spray jet to the charging station must be at least 2 m to avoid dangerous voltage flashovers).
-

CAUTION: Measures to prevent electrostatic discharge



The HYC400 contains components and assemblies that are susceptible to electrostatic discharge (e.g. circuit boards). Take appropriate ESD measures to protect the electronics during any work on the hypercharger:

- Wear a grounding bracelet and ground it at one of the potential equalisation points on the charging station, e.g. on the doors.
- If you use gloves, they must be ESD compliant.

Notice



The main switch for switching off the device is located at the bottom of the service door side and is marked “QB1” (see Figure 15). Turn the circuit breaker to position “0”, this will turn off all internal components of the HYC400. Please note possible unloading times of up to 5 minutes.



By pressing the (optionally installed) emergency stop switch (Chapter 4.8.2), the charging process is interrupted/deactivated and the SiC Power-Stacks of the hypercharger are switched off. Please note possible unloading times of up to 5 minutes.

2. Intended use

The hypercharger ultra-fast charging system for electric vehicles is designed for indoor and outdoor use to perform fast charging for electric vehicles.

Notice

The charging station is designed for stationary installation.

No additional cables are required for the connection between the charging station (Electric Vehicle Supply Equipment, EVSE) and the electric vehicle (EV), apart from the cables for the AC charging option. The charging cable must not be modified to extend or shorten the cable length.



No adapters may be used that are not explicitly approved by the vehicle manufacturer.

The use of Y-cables or similar devices is not permitted.

No cable extensions may be used.

National application guidelines and specifications for charging stations must be taken into account.

3. Target group

This installation and maintenance manual is aimed both at charge point operators (CPOs) regarding the proper operation of the charging station, as well as at installation and maintenance technicians regarding installation, commissioning and maintenance.

3.1. Requirements for the charge point operator CPO

The charge point operator CPO is obliged to only entrust the proper operation of the charging station to persons with relevant basic knowledge of high-performance electrical systems and electric vehicles and proven knowledge of this installation and maintenance manual. The following requirements apply with regard to installation, commissioning and maintenance.

3.2. Requirements for installation, commissioning and maintenance

The installation, commissioning and maintenance of the charging stations may only be carried out by people who have received professional qualifications in accordance with the regulations applicable in the location where the charging station is located and who are familiar with local legal safety standards. Furthermore, these people must individually have successfully completed the training courses prescribed by alpitronic. Further information about the mandatory training courses is available on the website <https://training.hypercharger.it/>.

In addition, before any work is carried out, this installation and maintenance manual must be read carefully by the responsible persons and strictly adhered to.

If you have any questions, the hypercharger support team can be reached using the contact details listed above.

4. Product description

The HYC400 from the hypercharger product family can be equipped with up to 4 DC charging cables. If the charging station has a 22 kW AC charging socket or a 22 kW AC charging cable, only 3 DC charging cables are possible.

Notice



The maximum cable configuration (4 x DC or 3 x DC plus 1x AC) is technically possible. In practice, however, it is recommended to equip the charging station so that two charging points can be operated at the same time. This corresponds to the optimal design in terms of performance and ergonomics (e.g. cable management, cooling of the charging cables).

Up to 4 SiC Power-Stacks of 100 kW each can be installed to supply the DC charging cables installed on the HYC400 (detailed information in chapter 4.7.1).

Model	DC-Power	Charge Interfaces (see chapter 4.1)
HYC400	<ul style="list-style-type: none"> - 1 SiC Power-Stack → 100 kW - 2 SiC Power-Stacks → 200 kW - 3 SiC Power-Stacks → 300 kW - 4 SiC Power-Stacks → 400 kW 	<ul style="list-style-type: none"> - 1 DC Charging cable - 2 DC Charging cable - 3 DC Charging cable - 4 DC Charging cable - 22 kW AC charging socket or AC charging cable (only possible with a maximum of 3 DC charging cables)

Table 1: Overview of DC power & charge interfaces



Figure 1: DC power equipment

manuel.palm@baywa-re.com
23.02.2024 14:00:29

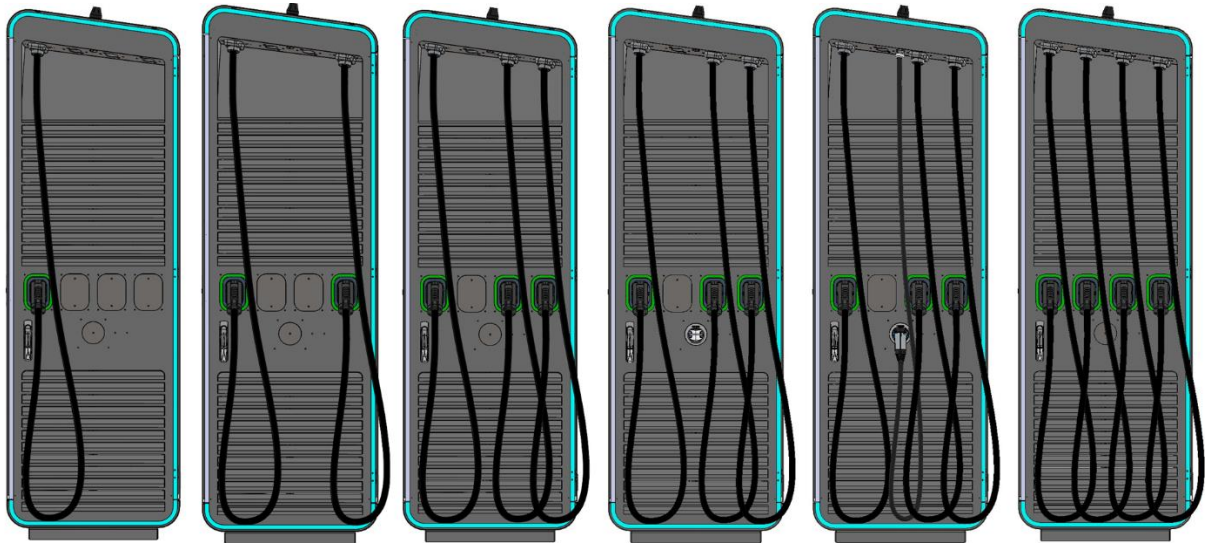


Figure 2: Charge interface equipment

Notice



As standard, the hypercharger housing is delivered in the colour “Noir 2100” and the reflector strips in “Pantone 3115 C”. Customers can optionally configure both the colour of the housing powder coating and the colour of the reflector strips themselves. Individual foiling can also be ordered.



Customs tariff number of the hypercharger: 85044060



The order of the charging points with a view of the charging cable door is always from left to right, AC (if available) is last (see Figure 3).

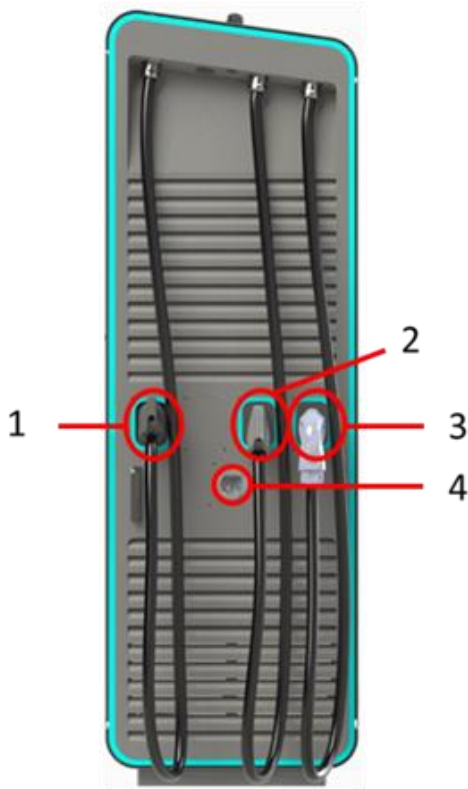


Figure 3: Order of charging points

4.1. Charging interfaces

The following charge interfaces can be selected for the hypercharger:

Charging interfaces					
Charging interface	Voltage [V]		Current [A]		
	Min.	Max.	Min.	Max.	Boost
CCS2	150 V DC	1,000 V DC	6.5 A	250 A DC 400 A DC	600 A DC
CCS2 HPC (liquid-cooled ¹)	150 V DC	1,000 V DC	6.5 A	500 A DC	600 A DC
CHAdeMO	150 V DC	500 V DC	6.5 A	125 A DC 200 A DC	
22 kW AC Type 2 charging socket (with lock) or AC charging cable		3 x 230 V AC	0.25 A	32 A AC	

Table 2: Charging interfaces

¹ The application mixture “innovatek Protect IP 52% Color” is used as a cooling liquid. Only the original, which can be ordered from alpitronic, may be used (sales@hypercharger.it).

Notice



The usable DC power of the HYC400 is limited by the maximum current of the DC charging cable used.

The effective current carrying capacity of the charging interfaces is stated on the type plate of the respective charging station (see chapter 4.3.1).

Variants with CCS1 and GB/T interfaces are also possible for the automotive industry:

Charging interfaces					
Charging interface	Voltage [V]		Current [A]		
	Min.	Max.	Min.	Max.	Boost
CCS1	150 V DC	1,000 V DC	6.5 A	200 A DC	
CCS1 HPC (liquid-cooled ¹)	150 V DC	1,000 V DC	6.5 A	500 A DC	600 A DC
GB/T	150 V DC	1000 V DC	6.5 A	250 A DC	

Table 3: Additional charging interfaces for automotive multi-chargers

Notice



The boost function can only be guaranteed for a certain period of time depending on ambient conditions (ambient temperature, cable length and previous charging cycles).



The charging cables CCS1 and CCS2 can be equipped with temperature sensors that can derate the maximum available charging current when the defined temperature limits are reached.

The following combinations are possible:

HYC400			
Exit 1	Exit 2	Exit 3	Exit 4
CCS 1/2*	N/A	N/A	N/A
CCS 1/2*	N/A	N/A	CCS 1/2*
CCS 1/2*	N/A	N/A	CHAdeMO
CCS 1/2*	N/A	CHAdeMO	CCS 1/2*
CCS 1/2*	CCS 1/2	CCS 1/2, CHAdeMO	CCS 1/2*

* cooled cable possible

Table 4: Possible combinations of charging interfaces

This Figure 4 shows the DC power characteristics with one, two, three and four hypercharger SiC Power-Stacks and different cable types:

- CCS1/2 HPC liquid-cooled 500 A (with boost up to 600 A)
- CCS2 400 A (with boost up to 600 A)
- CCS2 and GB/T 250 A
- CCS1 and CHAdeMO 200 A
- CHAdeMO 125 A

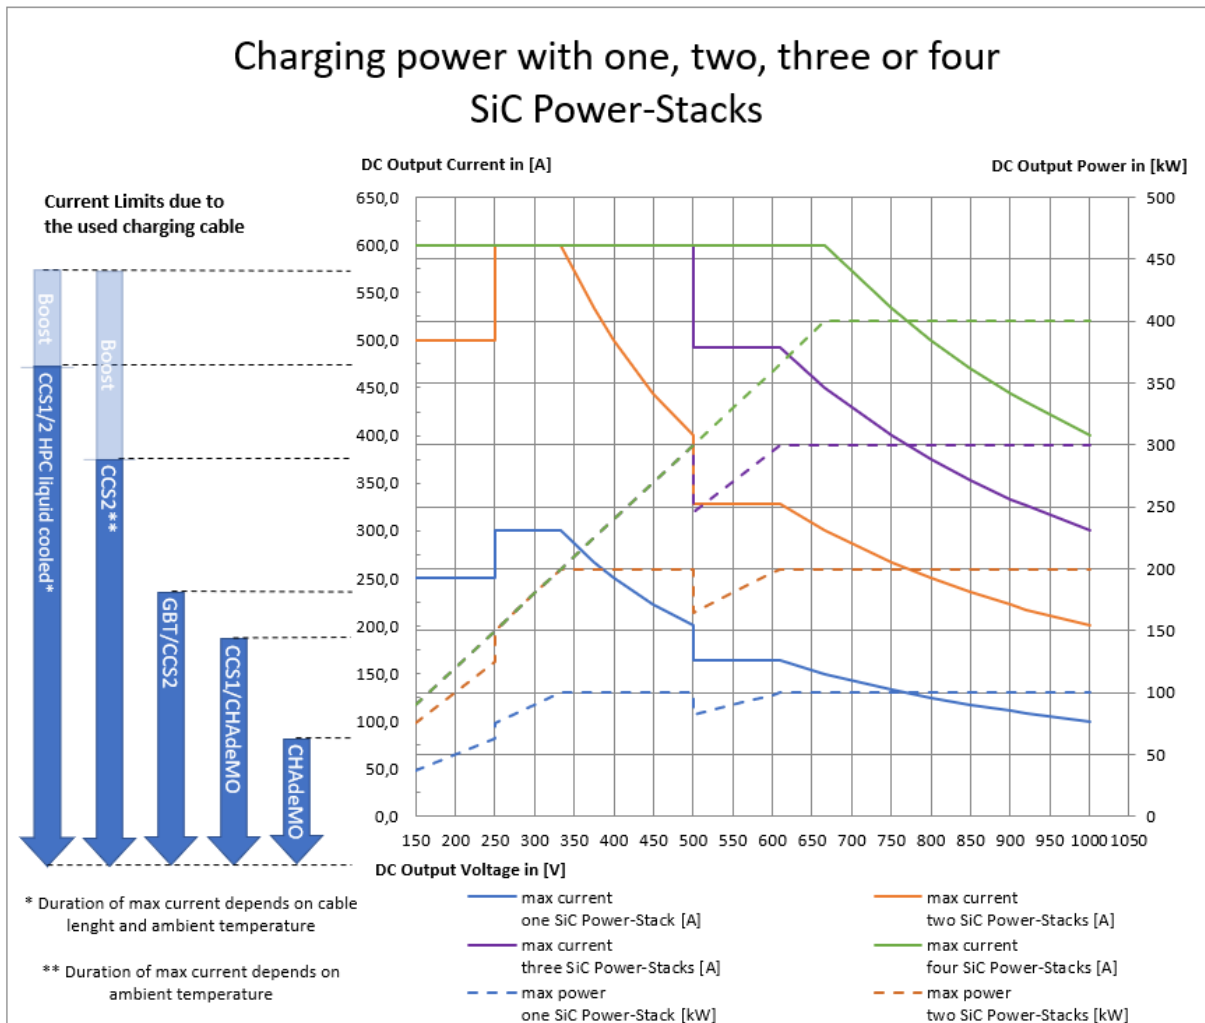


Figure 4: DC power characteristics in different configurations

In its standard configuration, the hypercharger is equipped with a cable length of **3.5 m** or **5 m**. Figure 5 shows the operating radius (3 m and 4 m) of the cables for the two hypercharger DC outputs.

Notice



Longer cable lengths can also be ordered as an option. For this, turn to sales@hypercharger.it.

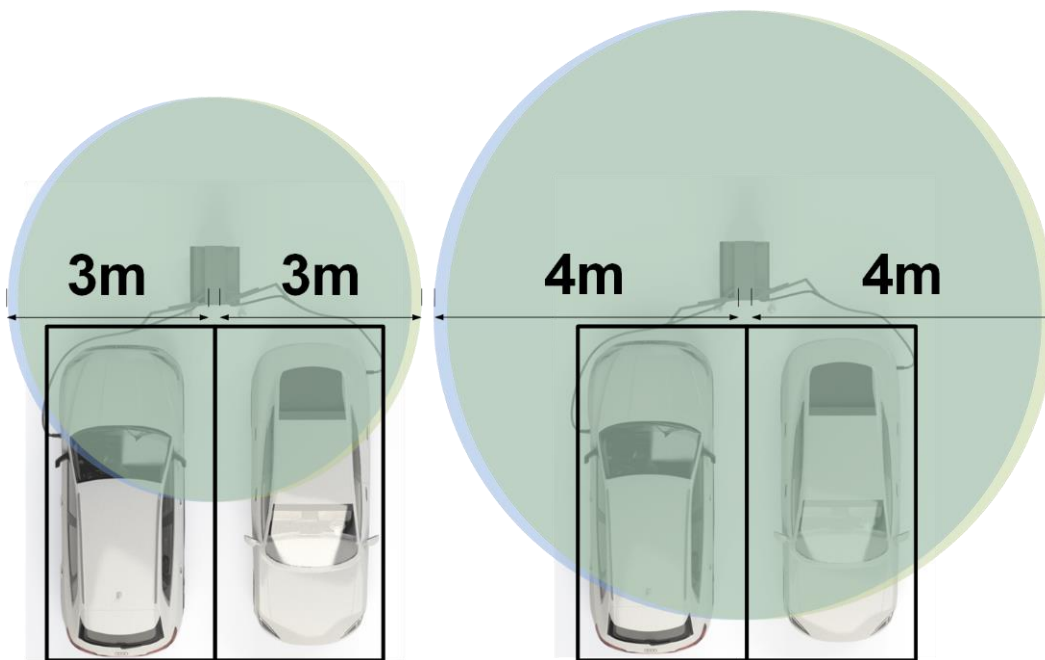


Figure 5: Cable radii for charging cables 3.5 m (left) and 5 m (right)

The cable radii of the 3.5 and 5 m cables refer to a standard charging height of 0.8 m.



Figure 6: Standard charging height of 0.8 m

Notice



Make sure that there are no sharp edges within the operating radius of the charging cables to ascertain that the insulation of the charging cables is not damaged and proper functioning is still guaranteed.

For easier handling of the 5 m charging cable, a cable management option can be ordered. This prevents the cables from touching the floor and becoming damaged.

Notice



The cable management is specially optimised for cable lengths of 5 m and is recommended for such equipment.

It is also possible to use the cable management for shorter or longer charging cables, but in the first case the cable loses its radius and cables longer than 5.5 m touch the floor despite the cable management.



The cable management must be ordered separately. For this, turn to sales@hypercharger.it.



Instructions for installing the cable management are available on the hyperdoc document platform.

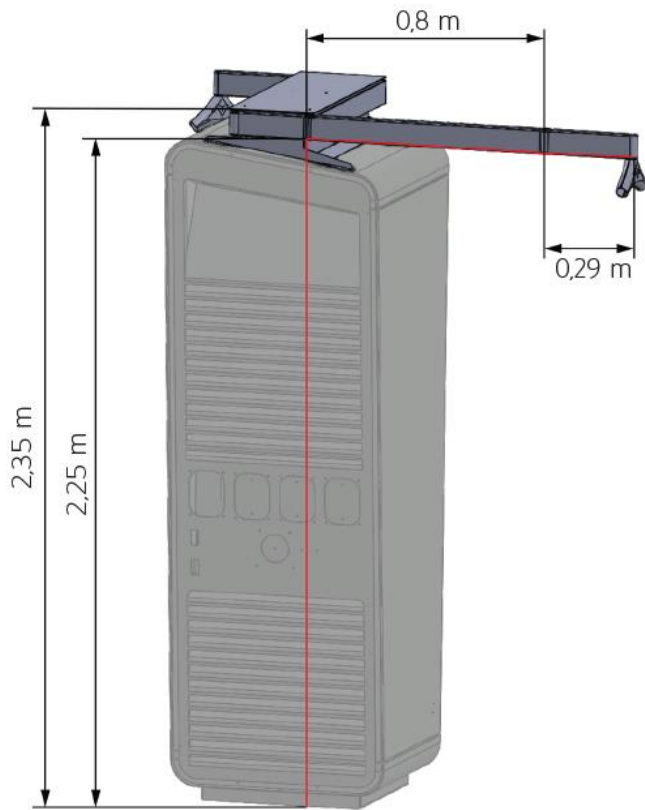


Figure 7: Cable management

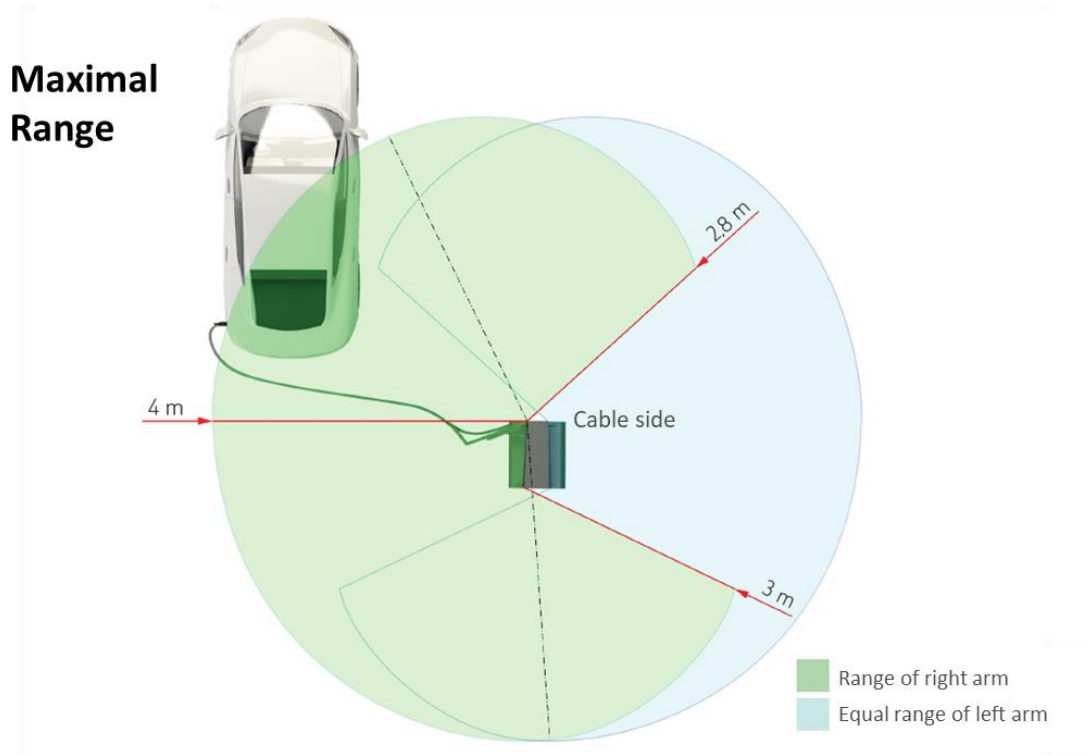


Figure 8: Cable management range

manuel.palm@baywa-re.com
23.02.2024 14:00:29

4.2. Granularity

Thanks to the new switching matrix in the output switchgear, the power output of the HYC400 can be distributed more efficiently. A granularity of 50-100 kW steps is possible (due to the structure of the switching matrix, 50 kW steps are possible for the two inner SiC Power-Stacks, but 100 kW steps are possible for the outer two SiC Power-Stacks. If a HYC400 is equipped with only two SiC Power-Stacks, these are installed in the middle so that the 50 kW granularity is guaranteed for a total of 200 kW).

Depending on the equipment of the charging station, up to 4 power outputs (both DC and AC) can be operated simultaneously, while maintaining the galvanic isolation between the network and the vehicles as well as the vehicles from each other.

If necessary, the SiC Power-Stacks can be connected in parallel so that the maximum charging power of 400 kW is made available via a single DC charging cable.

Notice



The maximum cable configuration (4 x DC or 3 x DC plus 1x AC) is technically possible. In practice, however, it is recommended to equip the charging station so that two charging points can be operated at the same time. This corresponds to the optimal design in terms of performance and ergonomics (e.g. cable management, cooling of the charging cables).

Table 5 shows how the output power can be divided in the case of a HYC400 with 2 charging interfaces and 4 SiC Power-Stacks:

	1	2	3	4	5	6	7
Connector A	0 kW	100 kW	150 kW	200 kW	250 kW	300 kW	400 kW
Connector B	400 kW	300 kW	250 kW	200 kW	150 kW	100 kW	0 kW

Table 5: Possible distributions of output power

Notice



The example shown above corresponds to the most common HYC400 configuration; further examples for other configurations can be viewed in a separate document on the hyperdoc document platform.



The distribution depends on various factors such as load management, connected load and the possible charging capacity or power demand of the respective vehicles.

4.3. Exterior view

The following figure shows the various elements of the device from the outside.

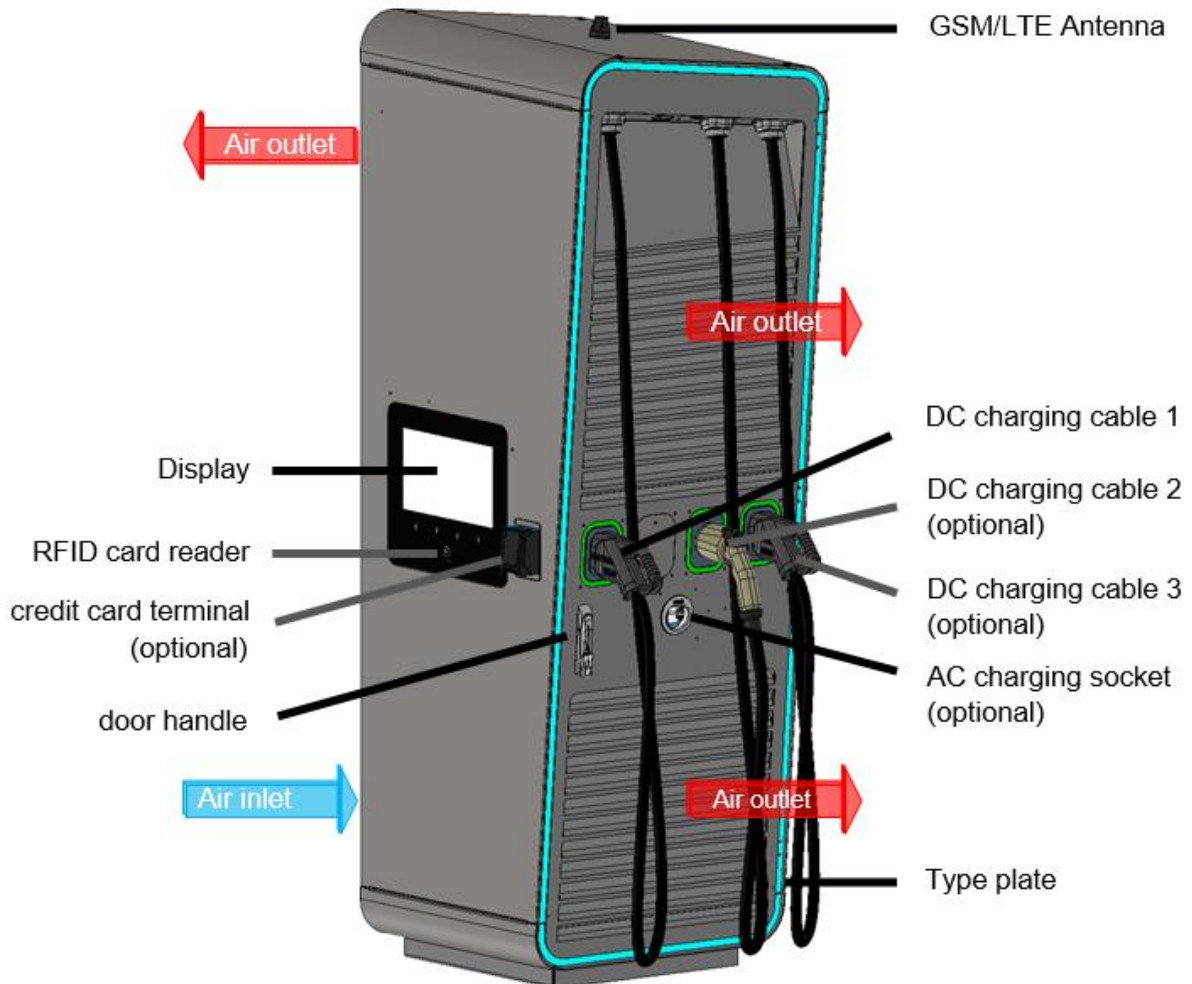


Figure 9: HYC400 exterior

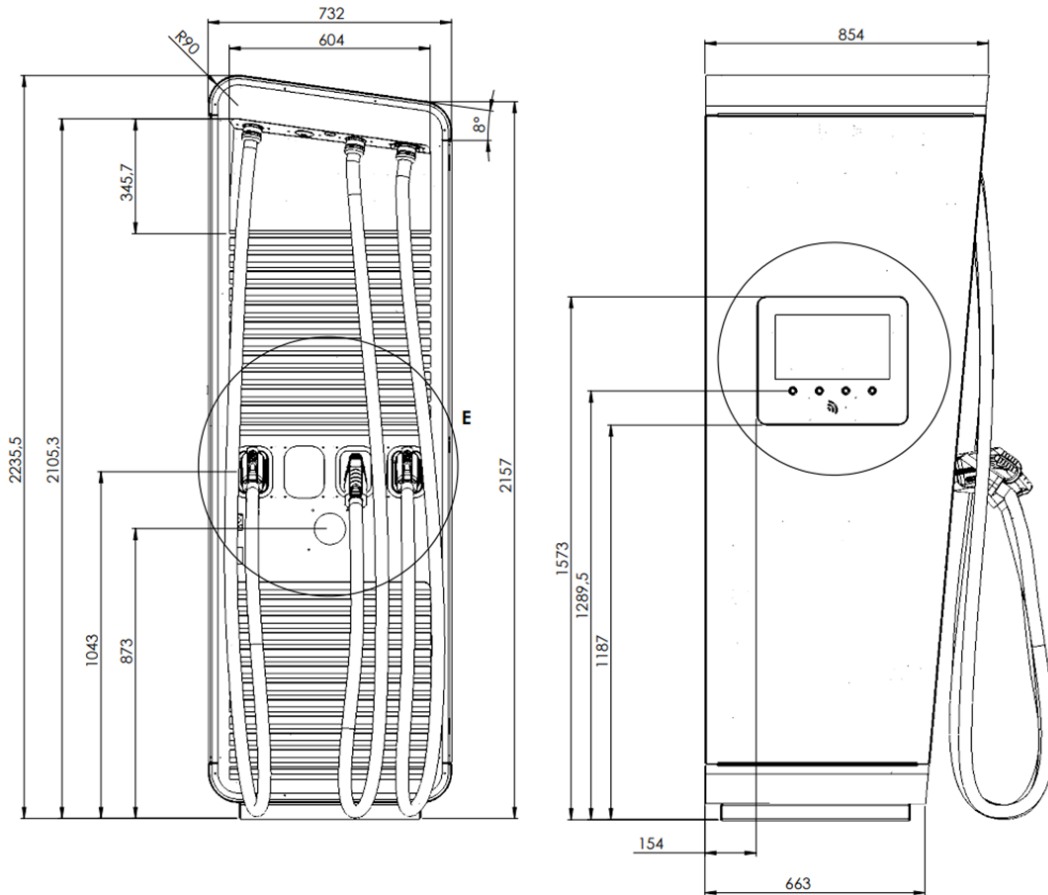








Figure 10: Outer dimensions of the HYC400 (in mm)

4.3.1. Type plate

The type plate is located opposite the display door in the lower right corner. It contains the CE marking, serial number and electrical characteristics of the charger.

Model	HYC_400				SN: 23BZ0001D
Manufactured	2023				
HW-Revision	4.0				
Max. weight (kg)	810				
Degree of protection	IP54				
Main voltage (V)	3 x 230 (400)				
Frequency (Hz)	50				
Max. input current (A)	630				
Charging interface	CCS2	CHAdeMO	CCS2	AC	
Min. Max. charging current (A)	6,5 600	6,5 125	6,5 600	0,25 32	
Min. Max. charging voltage (V)	150 1000	150 500	150 1000	3 x 230	
Temperature range (°C)	-30 to +55 (+40 to +55 with derating)				



Made in Italy
alpitronic Srl
Via di M, ai Piani 33
I-39100 Bolzano




Figure 11: Example of a HYC400 type plate

23.02.2024 14:00:29

4.4. Opening the hypercharger

The hypercharger has three doors that allow access to the inside of the device (Figure 13). The service door and the charging cable door are equipped with locking cylinders to lock the device. This is a profile half cylinder (made of brass and nickel-plated) with a pin cylinder and adjustable 8x45° thumb.

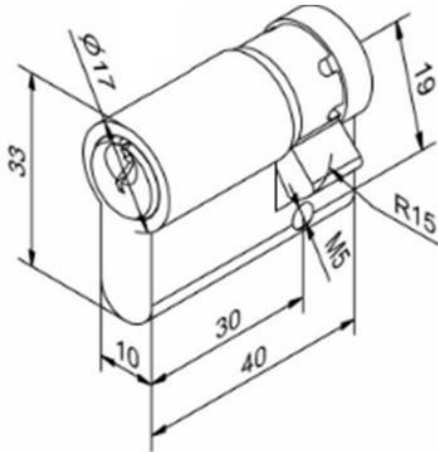


Figure 12: Half cylinder used (in mm)

Notice



If you want to replace the locking cylinder, make sure to only use half cylinders with a maximum length of 30/10. Otherwise, the cover flap can no longer be closed properly.



When opening the display door, make sure that the service and charging cable doors are already open! Otherwise, there is a risk that the reflector strips of the service door will be damaged.

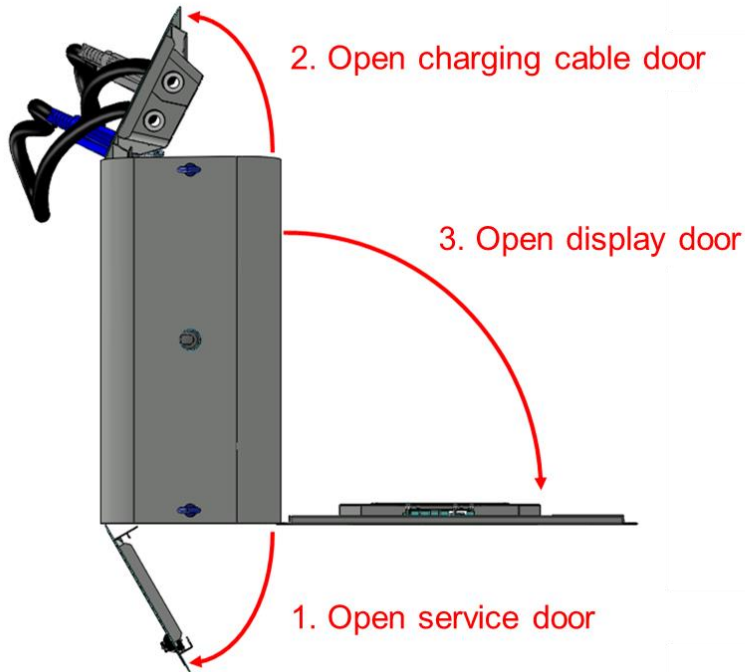


Figure 13: Order to open the hypercharger doors

The display door can be opened by releasing the locking mechanism behind the charging cable door, as shown in the following image.

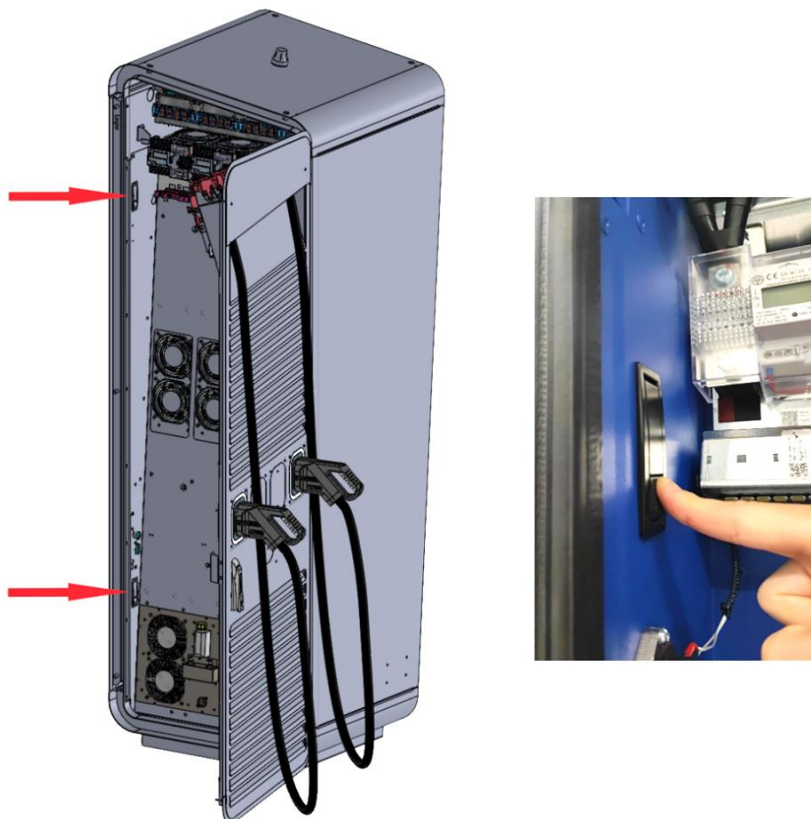


Figure 14: Locking mechanism for the display door

Notice



Condensation on surfaces can lead to defects in charging station components!

If it is raining, do not open the doors or cover the HYC400 before opening.



If the door is opened as far as it will go, make sure that no greater forces act on the door beyond the mechanical stop, in order to avoid damaging (bending) the door hinges. In such a case, for safety reasons, it is necessary to check whether the tightness of the door is still guaranteed.



When closing the doors, follow the correct order once again and ensure that all protective covers have been installed and that the doors have been properly locked.

4.5. Interior view

The following images show the interior view of the HYC400 on the side of the service door (Figure 15), display door (Figure 16) and charging cable door (Figure 17).

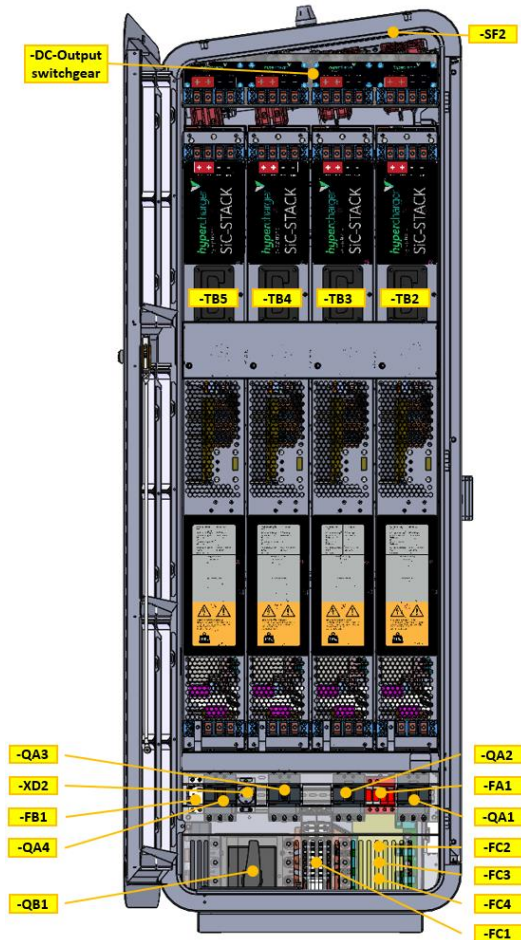


Figure 15: Interior view (service door side)

Labelling	Description
-FA1	Integrated overvoltage protection (SPD)
-FB1	10 A circuit breaker with residual current monitoring for the service socket
-FC1	Input fuse (fast)
-FC2	Backup fuse for SPD
-FC3	Fuse internal power supply (24 V auxiliary supply, service socket)
-FC4	Backup fuse AC charging point (optional)
-QA1, -QA2, -QA3, -QA4	160 A circuit breaker / 3P
-QB1	630 A Main switch / 4P
-SF2	Door contact switch 1 (optional)
-TB2, -TB3, -TB4, -TB5	SiC Power-Stacks
-XD2	Service socket 230 VAC for maintenance

Table 6: HYC400 components (service door side)

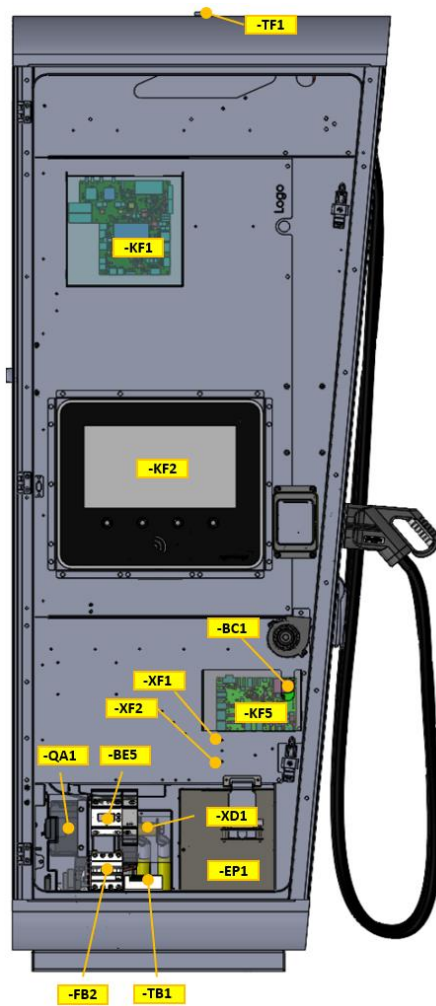


Figure 16: Interior view (display door side)

Labelling	Description
-BC1	DC residual current monitoring for AC charging (optional, only if an AC charging socket or AC charging cable is present)
-BE5	AC energy counter (MID compliant)
-EP1	Cooling unit for cooled charging cable (optional)
-FB2	32 A circuit breaker with residual current monitoring (optional, only if AC charging socket is available)
-KF1	CTRL_COM control board
-KF2	Display
-KF5	CTRL_EXT control board
-QA1	160 A circuit breaker / 3P
-TB1	24 V auxiliary supply
-TF1	Antenna (2G,3G, 4G/ LTE)
-XD1	Busbars power input
-XF1	Ethernet network socket (service)
-XF2	Ethernet network socket (client-LAN)

Table 7: HYC400 components (display door side)

manuel.palm@baywa-re.com
23.02.2024 14:00:29

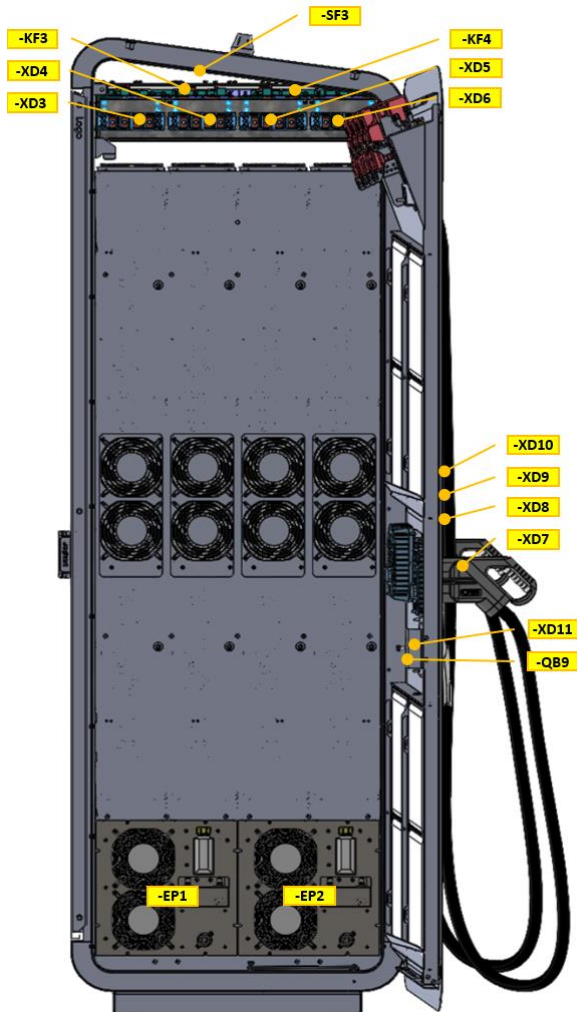


Figure 17: Interior view (charging cable door side)

Labelling	Description
-EP1, -EP2	Cooling unit for cooled charging cable (optional)
-KF3	CTRL_IO control board
-KF4	Additional CTRL_IO control board (with 3 or 4 DC outputs)
-QB9	Relay for AC charging (optional, only if AC charging socket is available)
-SF3	Door contact switch 2 (optional)
-XD3	DC busbar for vehicle line connection XD7 (DC output 1)
-XD4, -XD5, -XD6	DC busbars for vehicle line connection XD8, XD9, XD10 (optional, only if DC outputs 2/3/4 are available)
-XD7	DC charging port 1
-XD8, -XD9, -XD10	DC charging port 2/3/4 (optional)
-XD11	AC charging socket (optional)

Table 8: HYC400 components (charging cable door side)

Notice



The load management can be connected to both the Ethernet network sockets XF1 and XF2.

A **type F** (Italian standard) service socket is installed as standard. Alternatively, a **type E** socket (French standard) can be installed upon request.



Two different adapters are also available:

- **Adapter 1:** Type A+B (USA / Japan), Type G (UK), Type I (Australia / China), Type J (Switzerland)
- **Adapter 2:** Type D (India), Type H (Israel), Type K (Denmark)

For this, please turn to sales@hypercharger.it.

4.6. Circuit diagram

Figure 18 shows the circuit diagram of the HYC400.

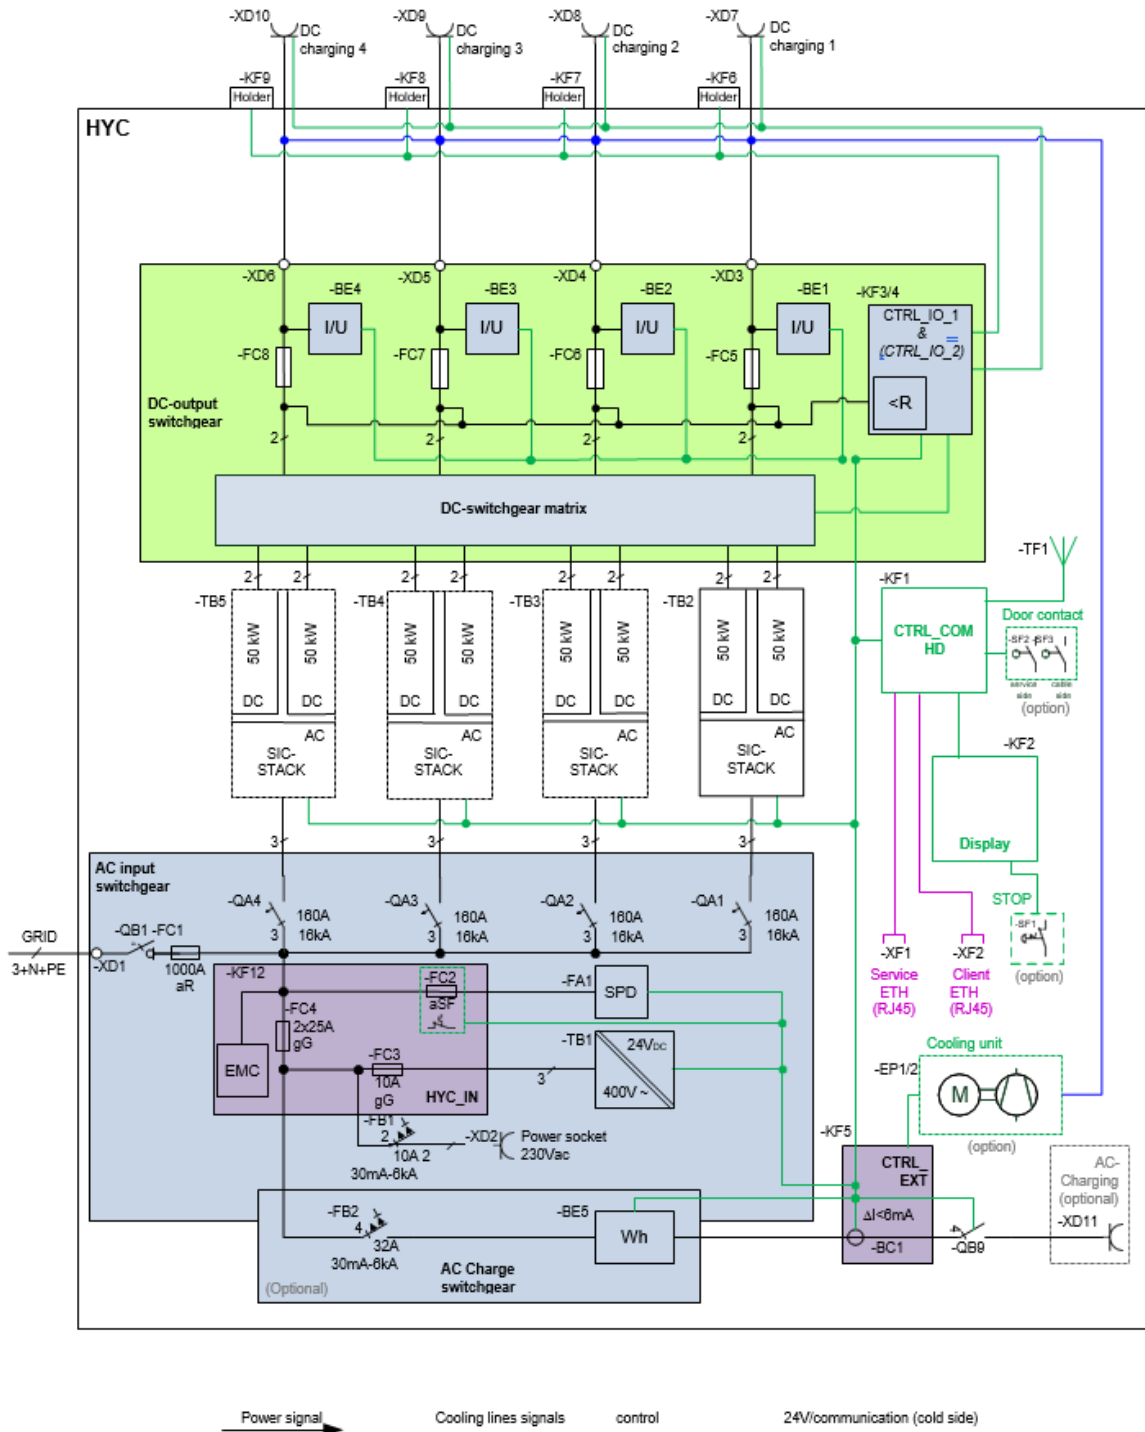


Figure 18: Circuit diagram of the HYC400

Labelling	Description
-BC1	DC residual current monitoring for AC charging (optional, only if an AC charging socket or AC charging cable is present)
-BE1	DC energy counter for DC output 1
-BE2, -BE3, -BE4	DC energy counter for DC outputs 2/3/4 (optional)
-BE5	AC energy counter (MID compliant)
-EP1, -EP2	Cooling unit for cooled charging cable (optional)
-FA1	Integrated overvoltage protection (SPD)
-FB1	10 A circuit breaker with residual current monitoring for the service socket
-FB2	32 A circuit breaker with residual current monitoring (optional)
-FC1	Input fuse (fast)
-FC2	Backup fuse for SPD
-FC3	Fuse internal power supply (24 V auxiliary supply, service socket)
-FC4	Backup fuse AC charging point (optional)
-FC5	Fuse DC output 1
-FC6, -FC7,-FC8	Fuse DC outputs 2/3/4 (optional)
-KF1	CTRL_COM control board
-KF2	Display
-KF3	CTRL_IO control board
-KF4	Additional CTRL_IO control board (with 3 or 4 DC outputs)
-KF5	CTRL_EXT control board
-KF6	Cable plug holder for DC output 1
-KF7, -KF8, -KF9	Cable plug holder for DC outputs 2/3/4 (optional)
-KF12	HYC_IN including EMC components and fuses
-QA1, QA2, QA3, QA4	160 A circuit breaker / 3P
-QB1	630 A Main switch / 4P
-QB9	Relay for AC charging (optional, only if AC charging socket is available)
-SF1	Emergency stop switch (optional)
-SF2, -SF3	Door contact switch 1+2 (optional)
-TB1	24 V auxiliary supply
-TB2, TB3, TB4, TB5	SiC Power-Stacks
-TF1	Antenna (2G, 3G, 4G/LTE)
-XD1	Busbars power input
-XD2	Service socket 230 VAC for maintenance
-XD3	DC busbar for vehicle line connection XD7 (DC output 1)
-XD4	DC busbar for vehicle line connection XD8 (optional)
-XD5	DC busbar for vehicle line connection XD9 (optional)
-XD6	DC busbar for vehicle line connection XD10 (optional)
-XD7	DC charging port 1
-XD8, -XD9, -XD10	DC charging port 2/3/4 (optional)
-XD11	AC charging socket (optional)
-XF1	Ethernet network socket (service)
-XF2	Ethernet network socket (client-LAN)

Table 9: HYC400 circuit diagram legend

4.7. Main components

4.7.1. SiC Power-Stack

The SiC Power-Stack is the power module that converts the alternating voltage to an electrically isolated direct voltage. The dimensions of the SiC Power-Stack are provided in Figure 19, the weight is 110 kg.

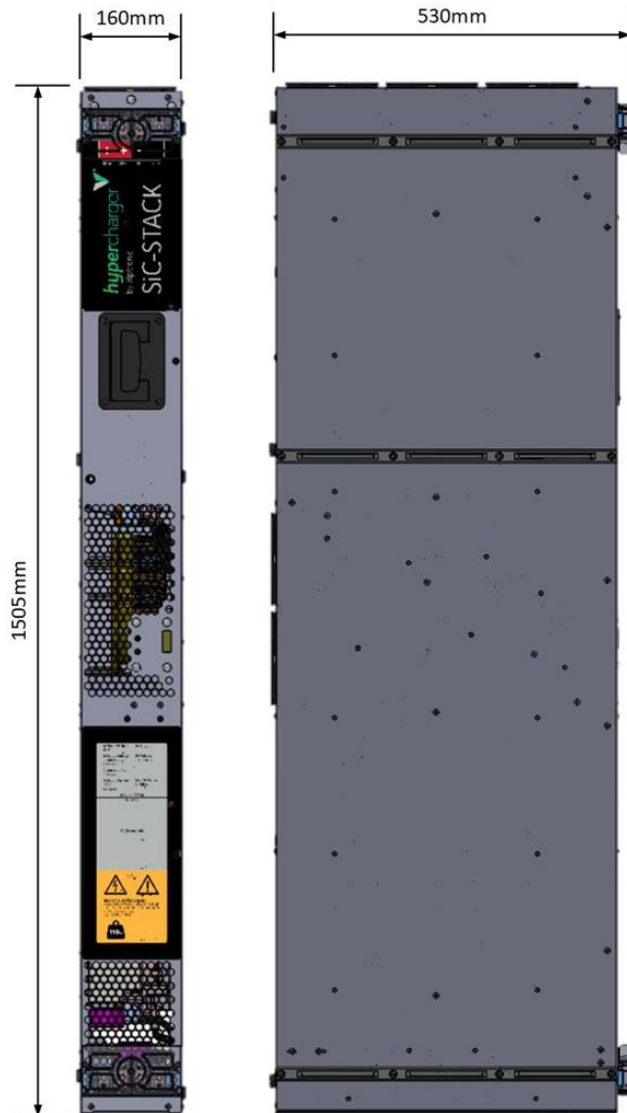


Figure 19: Dimensions of the SiC Power-Stack

The supply lines on the AC connection block have a cross section of 50 mm².
Figure 20 shows the AC connection block at the bottom of the SiC Power-Stack.

Notice



Tighten the screws with a torque of **15 Nm**.

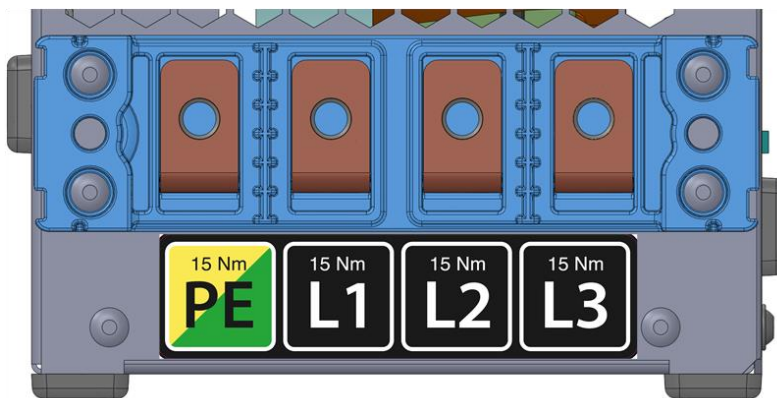


Figure 20: AC connection block

The output lines on the DC connection block have a cross section of 35 mm². Figure 21 shows the DC connection block at the top of the SiC Power-Stack.

Notice



Tighten the screws with a torque of **15 Nm**.

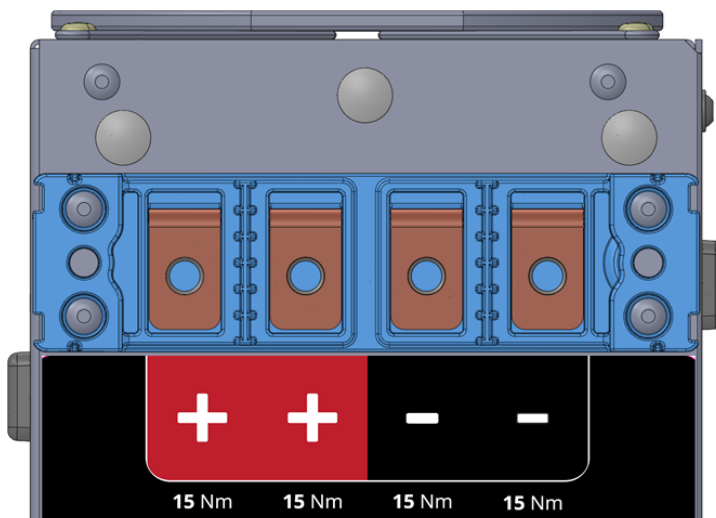


Figure 21: DC connection block

Parameter	Nominal value
Type of protection	IP20
Place of assembly	For control cabinet installation
Manner of assembly	Plug-in module
Installation height	Up to a maximum of 4,000 m above sea level
Humidity transport or storage area	0 - 95% rel. (not condensing)
Operating humidity range	0 - 95% rel.
Protection class	Class I (Protective earthing)
Storage temperature range	-40 °C ... +55 °C
Operating temperature range	-30 °C ... +55 °C (+40 to +55 °C with derating)

Table 10: SiC Power-Stack technical data

Type	Width [mm]	Length [mm]	Height [mm]	Weight [kg]
SiC Power-Stack	160	516	1505	110

Table 11: Mechanical data

Electrical connection data of AC connection (input):

Parameter	Nominal value
AC operating voltage	3x 220/230/277 (380/400/480) Vac +PE (+10 % / -15 %)
Frequency	50/60 Hz (± 5 %)
Rated current input	160 A
Rated power	100 kW
Power factor	PF > 0.99
Inlet fuse to be used	160 A type B or type C
Network type	TN-S / TN-C / TN-CS / TT

Table 12: Electrical connection data of AC connection

Electrical connection data DC connection (output):

Parameter	Nominal value
Operating voltage range	150...1000 VDC
Output current	2x 0...150 A

Table 13: Electrical connection data DC connection

Attention



Adhere to all safety warnings outlined in Chapter 1 of this manual.

Warning



After the SiC Power-Stack has been disconnected from the power supply, dangerous residual voltages may still be present. For this reason, the discharge time of **5 minutes** must be strictly adhered to before opening the device.



During operation, increased temperatures can be expected at the air outlets of the SiC Power-Stacks.



One SiC Power-Stack weighs 110 kg. A suitable aid must be used for transport.

Notice



Due to the increased leakage current, a minimum protective conductor cross-section of $\geq 10 \text{ mm}^2 \text{ CU}$ or $\geq 16 \text{ mm}^2 \text{ AL}$ is required.



In certain cases, e.g. for installations in TT networks, the installation of a residual current device (RCD) is mandatory. If one is required by local regulations, a type B residual-current device (RCD) or an equivalent protective device against direct residual currents must be used. $I_{\Delta N} = 300 \text{ mA}$ is recommended.



If the circuit breaker of a SiC Power-Stack is in the middle position, this indicates a malfunction.
Contact hypercharger support (support@hypercharger.it) and under no circumstances switch the circuit breaker on again to avoid damage to the SiC Power-Stack.

The HYC400 has a modular design and can be equipped with a maximum of 4 SiC Power-Stacks.



A so-called air conduction plate is installed in all unoccupied positions, which regulates air circulation.

In order to be able to carry out a possible SiC Power-Stack upgrade, a corresponding online training course offered by alpitronic must be completed.

Find more at <https://training.hypercharger.it/>.

4.7.2. Input switchgear

The following figure shows the HYC400 AC input switchgear.

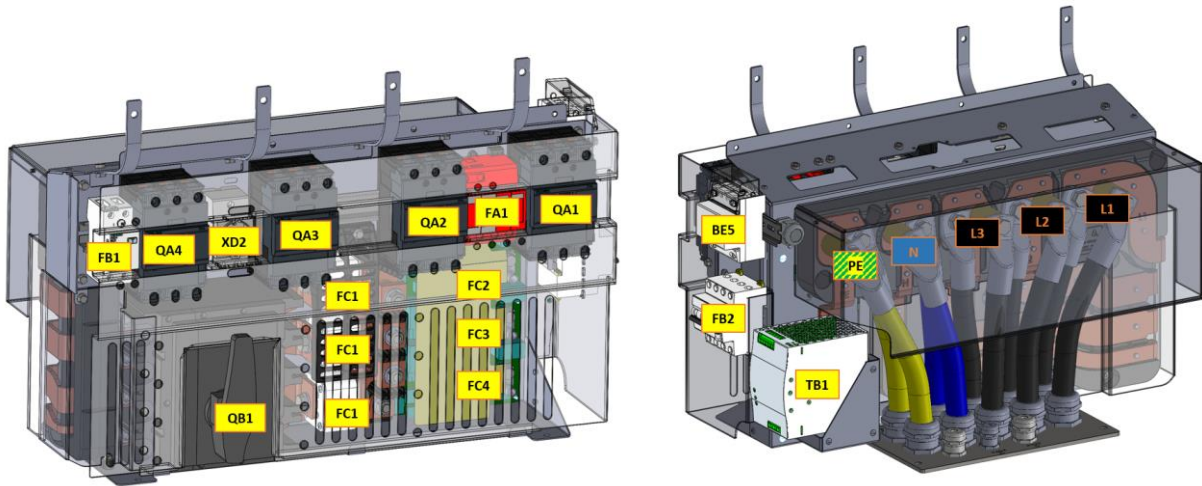


Figure 22: AC input switchgear

Labelling	Description
-BE5	AC energy counter (MID compliant)
-FA1	Integrated overvoltage protection (SPD)
-FB1	10 A circuit breaker with residual current monitoring for the service socket
-FB2	32 A circuit breaker with residual current monitoring (optional, only if AC charging socket is available)
-FC1	Input fuse (fast)
-FC2	Backup fuse for SPD
-FC3	Fuse internal power supply (24 V auxiliary supply, service socket)
-FC4	Backup fuse AC charging point (optional)
-QA1, -QA2, -QA3, -QA4	160 A circuit breaker / 3P
-QB1	630 A Main switch / 4P
-TB1	24 V auxiliary supply
-XD2	Service socket 230 VAC for maintenance

Table 14: Components of the AC input switchgear

4.7.3. Output switchgear

The following two figures show the DC output switchgear of the HYC400.

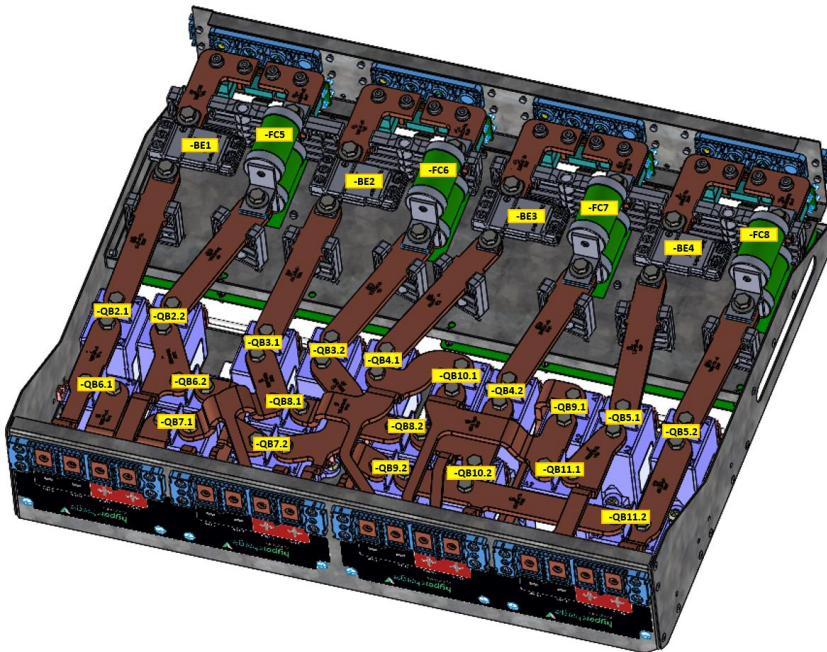


Figure 23: DC output switchgear (view from below)

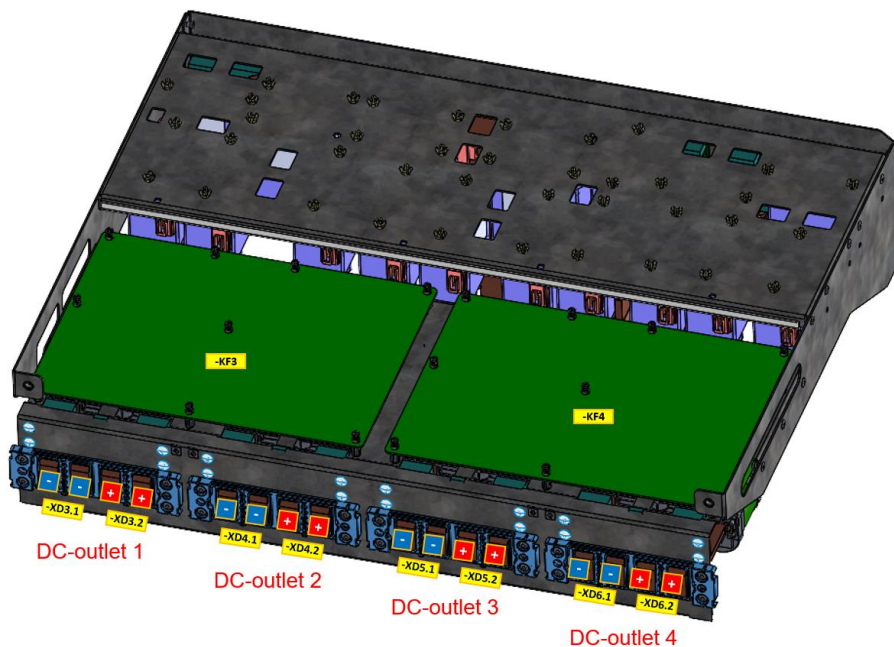


Figure 24: DC output switchgear (view from above)

Table 15 describes the individual components identified in the figures above:

Labelling	Description
-BE1	DC energy counter for DC output 1
-BE2, -BE3, -BE4	DC energy counter for DC outputs 2/3/4 (optional, only if DC outputs 2/3/4 are available)
-FC5	Fuse DC output 1
-FC6, -FC7, -FC8	Fuse DC outputs 2/3/4 (optional)
-KF3	CTRL_IO control board
-KF4	Additional CTRL_IO control board (with 3 or 4 DC outputs)
-QB2.1, -QB2.2	Relay DC output 1
-QB3.1, -QB3.2	Relay DC output 2 (optional, only if DC output 2 is available)
-QB4.1, -QB4.2	Relay DC output 3 (optional, only if DC output 3 is available)
-QB5.1, -QB5.2	Relay DC output 4 (optional, only if DC output 4 is available)
-QB6.1, -QB6.2 -QB7.1, -QB7.2 -QB8.1, -QB8.2 -QB9.1, -QB9.2 -QB10.1, -QB10.2 -QB11.1, -QB11.2	Relay to operate SiC Power-Stacks in parallel
-XD3.1	DC busbar - pole for charging cable connection XD7 (DC output 1)
-XD3.2	DC bus bar + pole for charging cable connection XD7 (DC output 1)
-XD4.1	DC busbar - pole for charging cable connection XD8 (DC output 2)
-XD4.2	DC bus bar + pole for charging cable connection XD8 (DC output 2)
-XD5.1	DC busbar - pole for charging cable connection XD9 (DC output 3)
-XD5.2	DC bus bar + pole for charging cable connection XD9 (DC output 3)
-XD6.1	DC busbar - pole for charging cable connection XD10 (DC output 4)
-XD6.2	DC bus bar + pole for charging cable connection XD10 (DC output 4)

Table 15: Components of the DC output switchgear

4.7.4. CTRL_COM

The CTRL_COM is the main board of the hypercharger. It is located on the inside of the display door opening. It contains the modems, the eight-port switch, the SOM and other interfaces to the individual secondary boards of the charging unit.

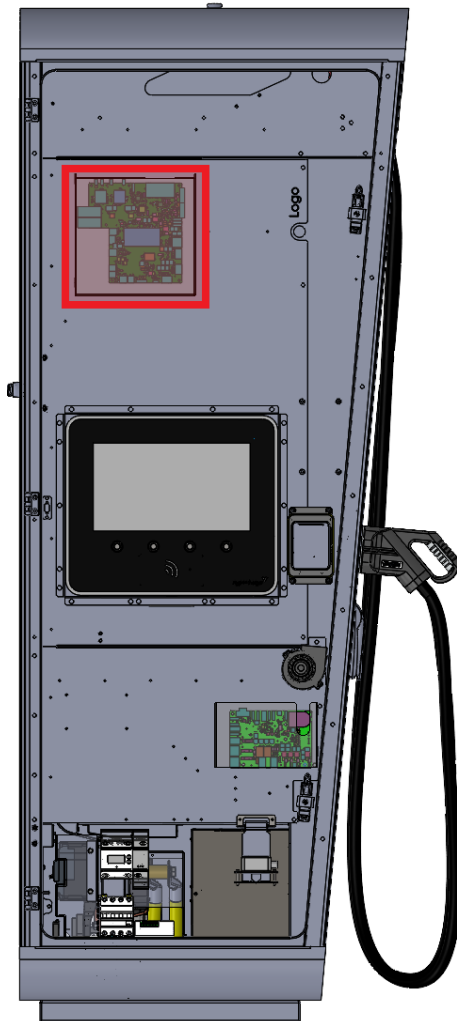


Figure 25: Position of the CTRL_COM in the hypercharger

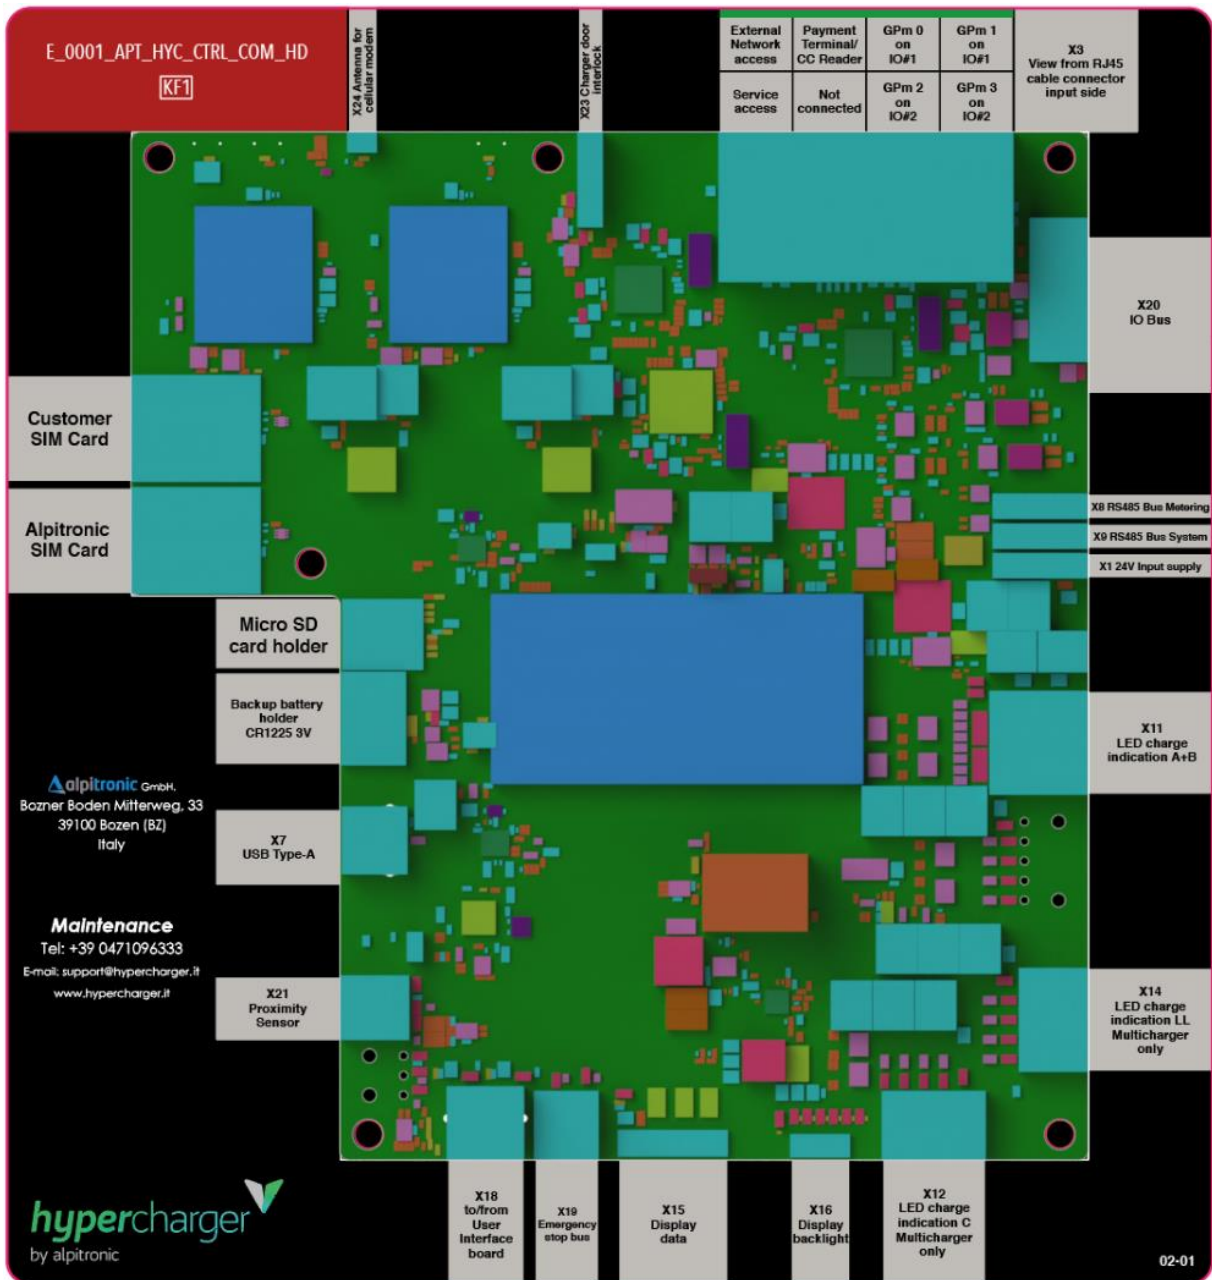


Figure 26: CTRL_COM

Notice



The SIM card slots are designed for Mini SIM cards (“standard size”). The charging station is delivered with an alpitronic SIM card already installed. A customer SIM card can be inserted.

4.7.5. Display including RFID reader

The display module is equipped with an RFID reader.

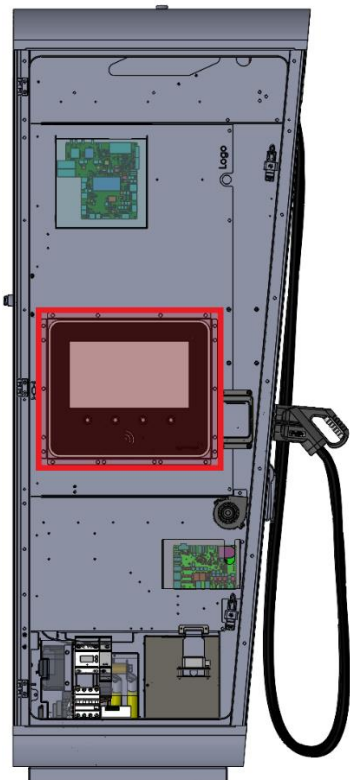


Figure 27: Display module

The display has the following features:

Parameter	Nominal value
Display diagonal	15.6"
Resolution	1.366 (H) x 768 (V) Pixel
Brightness	1000 cd/m ²

Table 16: Display properties

The following RFID standards are supported:

- NFCIP-1, NFCIP-2 protocol
- ISO/IEC 14443A, ISO/IEC 14443B PICC, NFC Forum T4T modes via host interface
- NFC Forum T3T via host interface
- ISO/IEC 14443A, ISO/IEC 14443B PCD according to NFC Forum digital protocol T4T platform and ISO-DEP
- FeliCa PCD mode
- MIFARE Classic PCD encryption mechanism (MIFARE Classic 1K/4K)
- NFC Forum tag 1-5 (MIFARE Ultralight, Jewel, Open FeliCa Tag, MIFARE DESFire)
- ISO/IEC 15693/ICODE VCD mode

manuel.palm@baywa-re.com
23.02.2024 14:00:29

4.7.6. CTRL_EXT

The CTRL_EXT board was introduced with hardware version 4 and replaces the functions of the DS24 board. It is used to control the supply of the various control boards, the cooling unit and other subcomponents. If the charging station has an AC output, it also takes over the 6 mA DC residual current detection for this.

The CTRL_EXT is located inside the display door opening, the exact location is marked in the following figure.

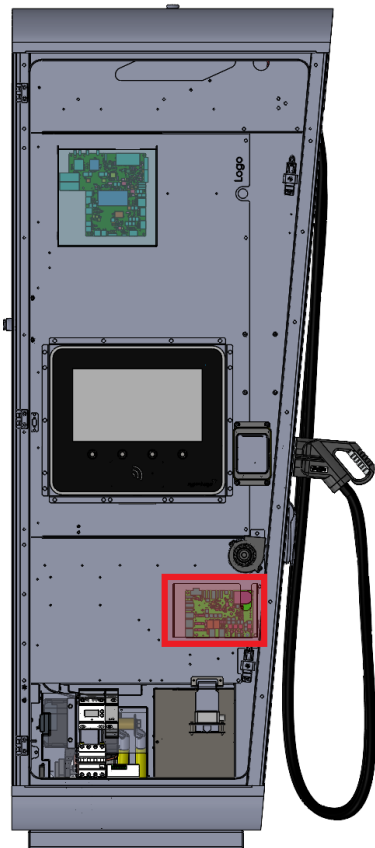


Figure 28: Position of the CTRL_EXT in the hypercharger

4.8. Additional options

4.8.1. Cooling unit

When using an actively cooled cable (see chapter 4.1), a cooling unit is required for each cooled charging cable.

Notice



The HYC400 can be equipped with a maximum of two cooling units and therefore with two cooled charging cables.

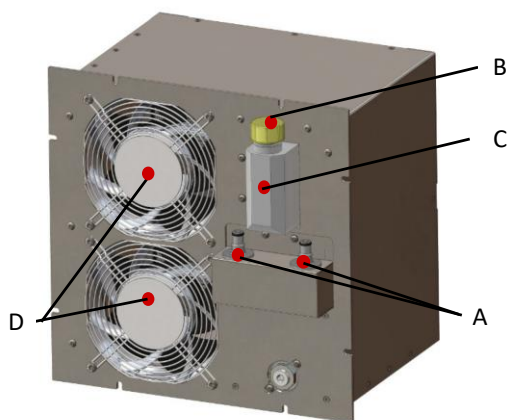


Figure 29: Cooling unit for one cooled charging cable (optional)

- A Connection of cooling hose
- B Filler neck
- C Level indicator
- D Fan

To facilitate the electrical installation of the hypercharger, the cooling unit should be removed while connecting to the power supply (see chapter 6.6).

“innovatek Protect IP 52% Color” from innovatek OS GmbH is used as **coolant**. The cooling liquid is supplied in an application mixture of 52%, which provides freeze protection down to -40°C. The capacity is approx. 1.5 l per cooling unit and charging cable.

Notice



Please note that for perfect functionality, only the original coolant intended for this purpose must be used! You can send orders to sales@hypercharger.it, the cooling liquid is then delivered in 1 litre bottles.



When filling the system, make sure that no air bubbles form in the cooling system, which could reduce the cooling performance. During refilling, the cooling unit should be disconnected from the supply to avoid overflow.

4.8.2. Emergency stop switch

The emergency stop switch was mandatory in the CHAdeMO 1.0 standard. In the CHAdeMO 1.1 standard (as of June 2016), the emergency stop switch is no longer required as a standard and the standard version of the hypercharger is designed without an emergency stop switch. However, the emergency stop switch can be ordered optionally upon request.

When activating the emergency stop switch:

- Every ongoing charging process is interrupted, all SiC Power-Stacks are deactivated and the contactors are opened towards the vehicle
- If the hypercharger is still under voltage internally and can still be accessed via the backend or the diagnostic webinterface,
- this can be detected via the backend or the diagnostic webinterface

The emergency stop switch is deactivated mechanically by turning the emergency stop switch counterclockwise. The hypercharger will then be ready for operation again after a few minutes and new charging processes can be started.

4.8.2.1. External emergency stop

There is also the option for an external emergency stop, which can be triggered via an external 230 V AC supply (provided by the customer). Here, a relay is installed inside the display door below the CTRL_EXT board (see chapter 4.7.6), the wiring of which can be routed outside by the customer.



Figure 30: Position of the external emergency stop relay in the hypercharger

The external 230 V cable is connected to terminals N, L and PE.

Depending on the requirements, a working current or closed-circuit release can be activated.

To activate a closed current, please connect contacts C1 and NO. This mode allows the charging station to operate when the relay is activated and voltage is present.

The shunt release allows the charging station to operate when the relay is not activated. If there is voltage at the contacts N, L and PE, this contact opens and the charging station is in emergency stop. To activate this mode, please connect contacts C2 and N2.

The relay should be set to "auto". To check functionality, you can manually set the relay to "0" or "1", but be sure to set it back to "auto" afterwards.

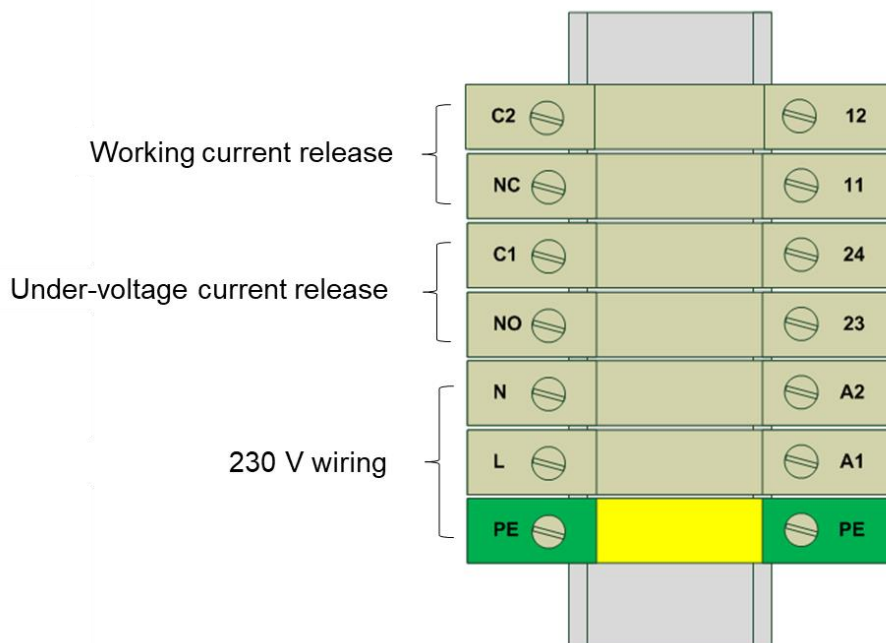


Figure 31: Connection options for external emergency stop

4.8.3. Crash Sensor

A crash sensor can optionally be installed in the hypercharger. This is supplied externally and triggers the charging station to be switched off if the set inclination is exceeded or if the charging station is exposed to vibrations. The crash sensor can be installed by alpitronic at the customer's request.

Notice



Please note that the crash sensor is installed in the same position in the HYC400 as the external emergency stop relay (see Figure 30). For this reason both options cannot be combined.

4.8.4. Door contact switch

In order to detect the opening of the hypercharger doors via the customer backend, door contact switches can be ordered as an option.

4.8.5. Credit card terminal

Optionally, the HYC400 can be equipped with a credit card terminal.

Various manufacturers and payment service providers are supported, but there are country-specific differences as not all models are available in all countries. Which credit and debit cards are supported also depends on these factors.

Notice



Contact sales@hypercharger.it to find out more about the options available in your country.



If the models you want are not yet supported, the technical requirements can be checked. At the discretion of alpitronic, new models may be implemented on a project basis.

4.8.6. Barrier-free hypercharger

The hypercharger product family can also optionally be ordered barrier-free. As shown in Figure 32, the screen is offset downwards by 20 cm.

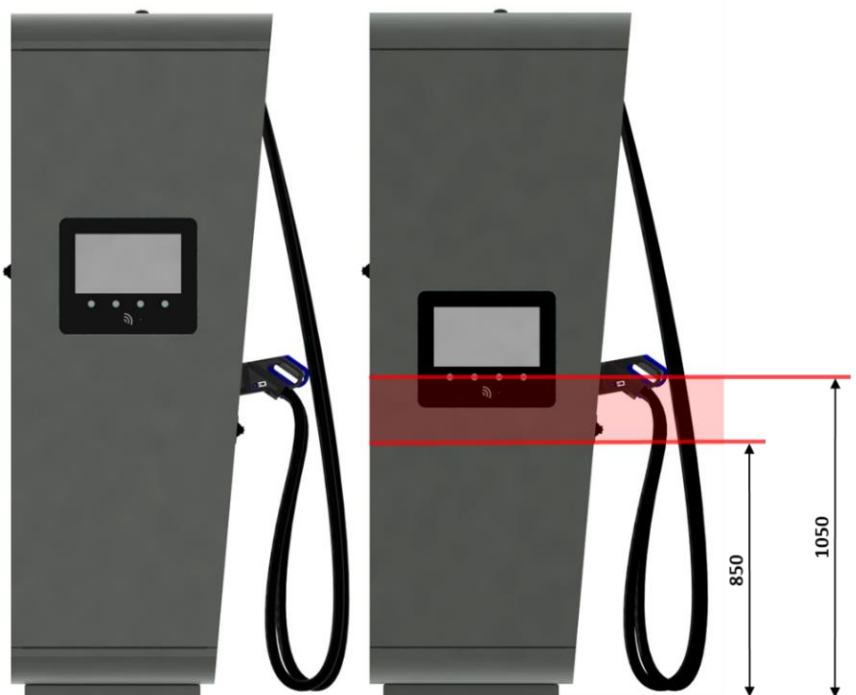


Figure 32: Dimensions of the barrier-free hypercharger (in mm)

5. Packaging, transport and storage

5.1. Packaging

The hypercharger comes in custom-made packaging made from 100% recyclable wood or cardboard. Both variants are transported on a metal pallet. Plastic fleece and polyethylene foam are used for padding and fixation, which must be disposed of separately.

Notice



For more information about packaging, please contact sales@hypercharger.it.



All hyperchargers are equipped with two “Tiltwatch” stickers before transport. This makes it possible to see whether the hypercharger was transported vertically (= green display) or has fallen (= red display). If the latter is the case, accept the delivery only with reservations and inform logistics@alpitronic.it.

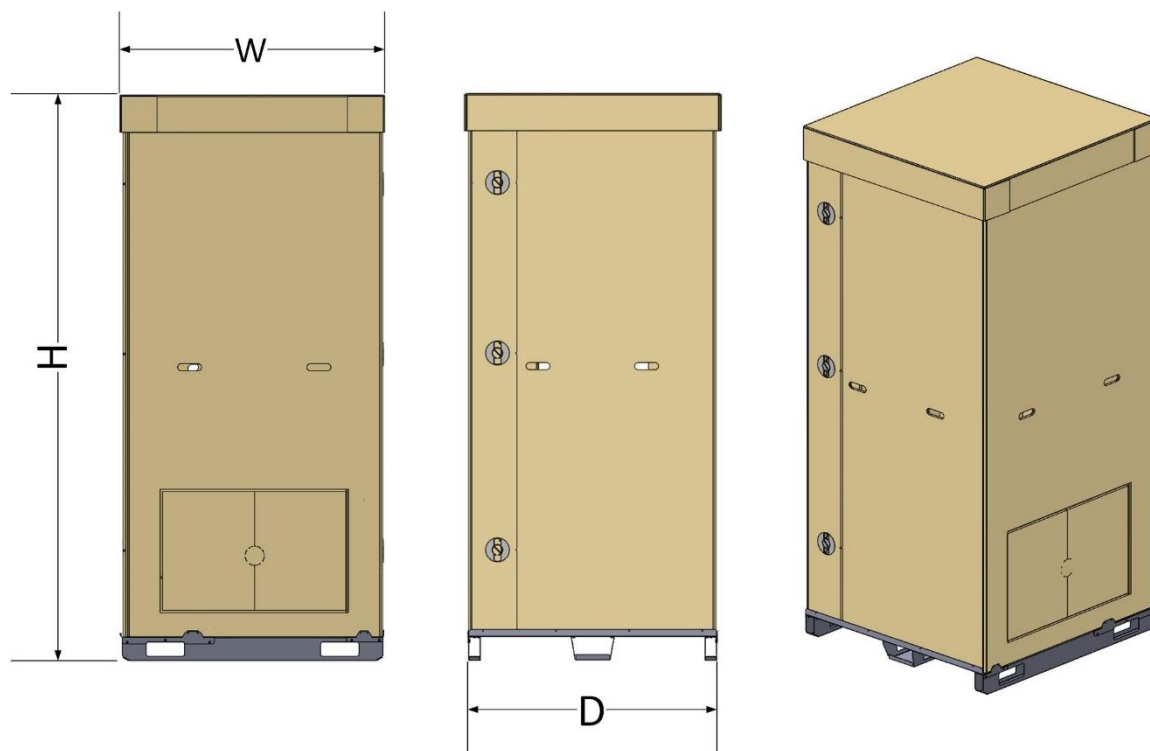


Figure 33: HYC400 cardboard packaging

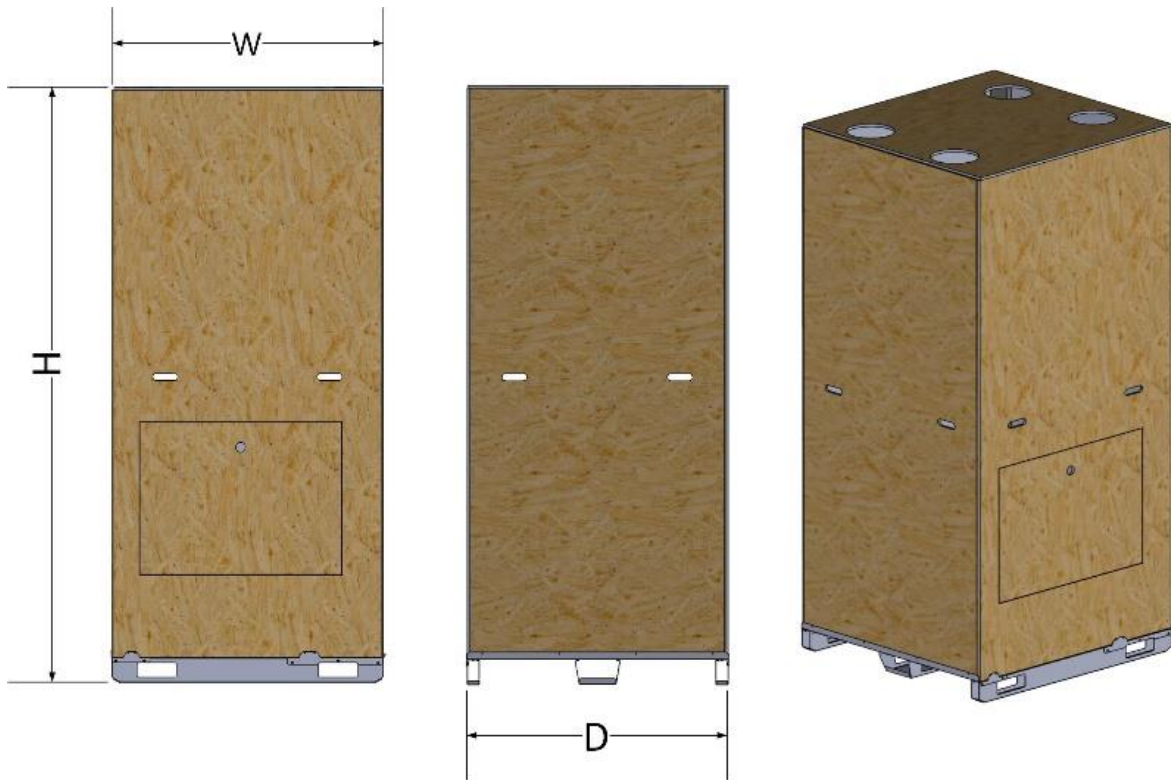


Figure 34: HYC400 wood packaging

Table 17 allows calculating the weight of the hypercharger product configurations depending on the packaging type, cable management, number of stacks, DC charging outlets and cooling units (maximum 2 for HYC400).

Device properties	hypercharger weight (kg)	Packaging weight (kg)	Size incl. packaging (cm)
HYC400 a: Number of charging cables (3.5 m) b: Number of charging cables (5 m) c: Number of SiC Power-Stacks d: Cable management e: Number of cooling units	$\sim 300 + a \cdot 11 + b \cdot 15 + c \cdot 110 + d \cdot 35 + e \cdot 12$ <860	Cardboard packaging + metal pallet: 20 + 21 Wood packaging + metal pallet: 125 + 21	B x H x T 105 x 238 x 110

Table 17: Weight calculation for HYC400

Notice



The HYC400, including packaging, can weigh up to 1 t depending on the configuration.

5.2. Transport and storage

Notice



The hypercharger must be transported vertically!

The hypercharger can be moved vertically with a forklift or with a crane by attaching it to the four crane eyes.

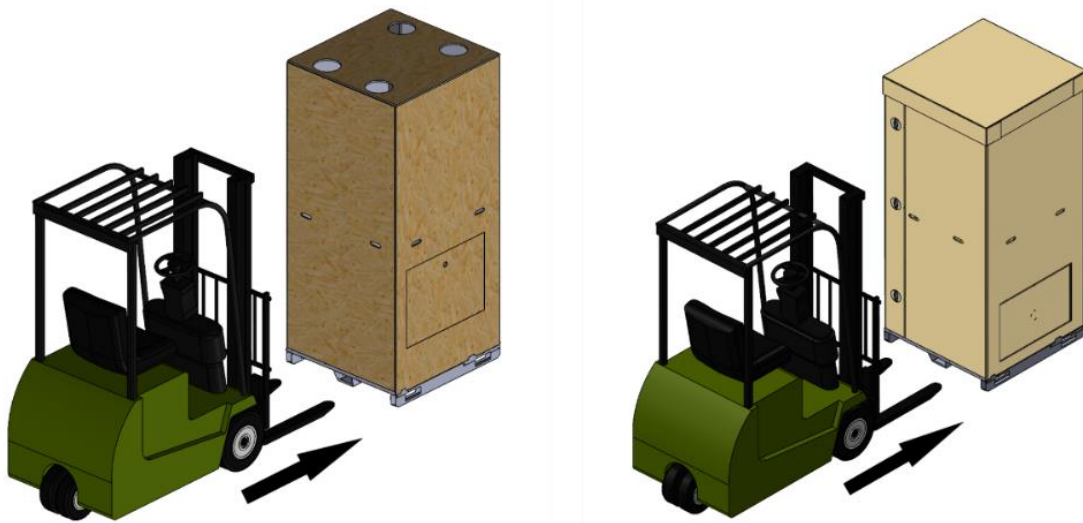


Figure 35: Vertical transport with forklift

Notice



When transporting the hypercharger with a crane, all four crane eyes (4 x M12) must be used (see Figure 36).



The maximum angle of the lifting strap should be 55° (see Figure 36). The minimum distance from the crane hook to the hypercharger roof is 775 mm. If the distance is less than this, there is a risk that the roof will bend.



To transport the hypercharger with cardboard packaging by crane, remove the top cover (see Figure 37, point 2) to expose the crane eyes.

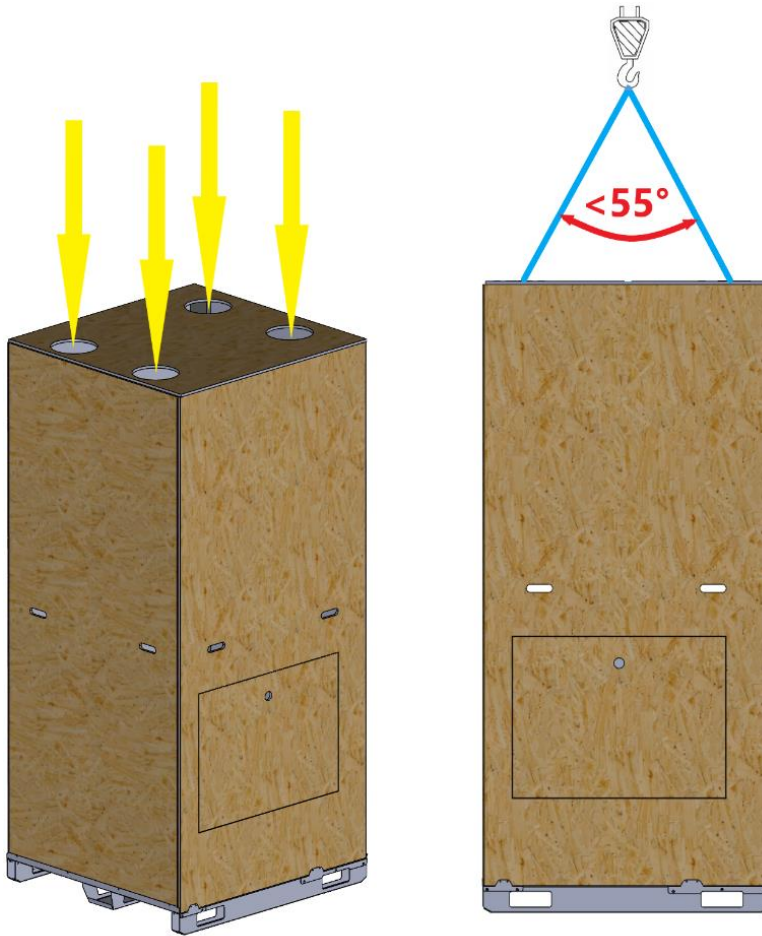


Figure 36: Position of the lifting eyes and maximum lifting strap angle

Notice







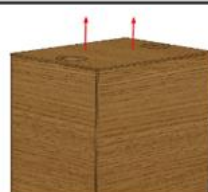
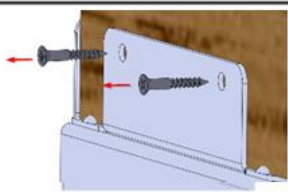
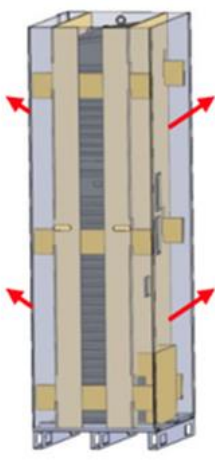

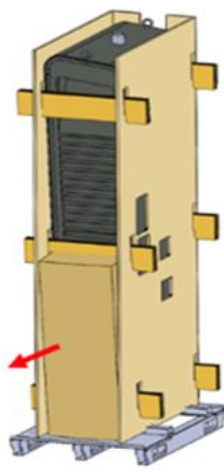
The hypercharger must be stored in its original packaging in a dry environment and temperatures from -40°C to $+55^\circ\text{C}$.








Be particularly careful when unpacking with knives, the HYC400 or other components could be damaged.

5.3. Unpacking the hypercharger

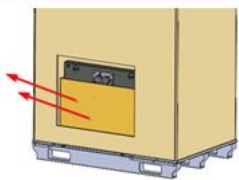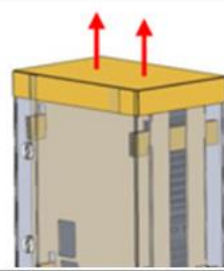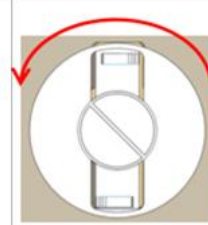It is recommended that you transport the hypercharger to its final destination in its original packaging and unpack it there. The following images show the order in which the hypercharger should be unpacked.

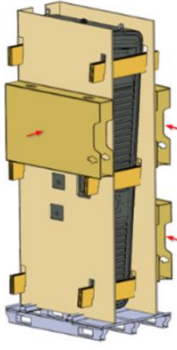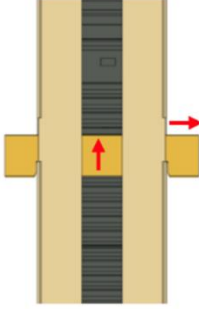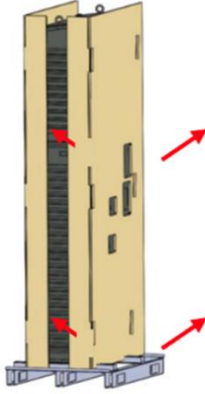1		2		3	
 <p>Open the box window and remove the box with the base plate. In the box you will find the base plate.</p>		 <p>The top cover of the box is removed by lifting it.</p>		 <p>Remove the three bayonet locks by turning them counter-clockwise.</p>	
 <p>OPTIONAL: For wooden packaging, the wooden window must be unscrewed.</p>		 <p>OPTIONAL: For wooden packaging, the wooden roof must be unscrewed and removed.</p>		 <p>OPTIONAL: For wooden packaging, all screws must be removed.</p>	
4			5		
 <p>Remove the first layer of the box.</p>			 <p>OPTIONAL: Remove the side walls of the wooden packaging.</p>		
			 <p>OPTIONAL: Remove this box. You will find the cable management in this box.</p>		

6	7	8	9	10
				
Remove the boxes. The charging cable can be found inside.	Remove the six connecting struts by sliding them up and then to the side.	Remove the rest of the box and the fleece.	Open the service door.	*Remove the screws at the bottom of the hypercharger. WARNING: Only unscrew if the charging station is secured using the crane eyes.




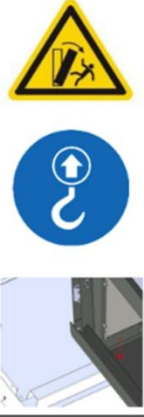

11	12	13	14	15
				
Open the charging cable door. Use all ring bolts to raise the hypercharger.	Open the display door.	If present, remove the cooling unit.	*Remove the screws at the bottom of the hypercharger. WARNING: Only unscrew if the charging station has been secured using the crane eyes.	Close all doors, lift the Hypercharger with a crane and remove the pallet.

Figure 37: Procedure for unpacking the hypercharger

***Attention**



Before loosening the fastening screws between the hypercharger and the pallet, the device must be protected from tipping over. This protection must be maintained until final installation on the foundation.

***Notice**



These screws can be reused during assembly. They are used to mount the hypercharger on the base (see chapter 6.5).

6. Mechanical and electrical installation

This chapter describes the mechanical assembly and electrical installation of the HYC400.

Attention



Adhere to all safety warnings outlined in Chapter 1 of this manual.

Notice



The installation of the charging stations may only be carried out by professionally qualified individuals, as per local regulations and safety standards. These individuals must also have successfully completed the mandatory training courses provided by alpitronic.

Further information about these training courses is available on the website <https://training.hypercharger.it/>.



The warranty may be void if the installation is not carried out properly.

6.1. Design of the supply

Notice



The HYC400 can be used in TT, TN-S, TN-C and TN-CS type supply networks.



To ensure proper functioning of the charging station, the mains supply must meet the requirements of IEC 60364-4-41. Occasional faults may occur if the power supply is provided by diesel generators or in unstable microgrids.



The total power of the HYC400 is limited to a 630A mains connection.



The EMC measures of this product meet the interference voltage limits Class A ≤ 20 kVA (IEC 61851-21-2:2018).

The HYC400 is designed for Type A (industrial) environments. Use in Type B environments (residential, commercial, and small businesses) may result in undesirable electromagnetic interference. In this case, the user may need to take appropriate remedial action.



The conductor cross-sections used depend on various factors such as cable length, power and fuse protection and must be defined by the electrical project designer in accordance with local regulations.



The recommended cross-sections for copper cables are **150-240 mm²** for L1, L2, L3 & PE (PEN) and **25 mm²** for the neutral conductor. The latter can be lower than the active conductors, as only the current for the service socket and for AC charging (if present) flows via the neutral conductor.



Two PE and N conductors are not necessarily required; one ground and one neutral conductor are sufficient.



Details about the cable glands and the corresponding clamping areas of the cable entry plate can be found in Table 19.



The dimensioning of the cables and protective devices outside the hypercharger must be carried out in accordance with local regulations and in compliance with the technical specifications of the hypercharger (see chapter 13).

Depending on the network configuration, a protective conductor current of >100 mA can be used. This must be taken into account when designing the protective grounding and protective measures.



Due to the leakage current, a minimum cross-section of the protective conductor of $\geq 10 \text{ mm}^2$ CU or $\geq 16 \text{ mm}^2$ AL is required.

If a residual-current device (RCD) has to be installed in the supply line (as is usual for installations in the TT network), an **RCD type B or an equivalent protective device** against direct residual currents (e.g. RCD type A in conjunction with a suitable device for switching off the supply with DC residual currents > 6 mA).

Type B with a typical $I_{\Delta n} = 300 \text{ mA}$ is recommended.



The hypercharger is equipped with a type 1+2 combined overvoltage arrester as standard. This means that the charging station can be set up in the LPZ Zone 0A. Care must be taken to connect to a suitable earthing system, taking into account country-specific legal requirements. It is also the responsibility of the installer to check whether lightning protection has been installed for the supply line in accordance with the country-specific legal requirements.



To ensure selectivity, it must be ensured that overcurrent or residual current protective devices connected in series only trip the device located directly upstream of the fault location. The test should be carried out in accordance with IEC 61439-2.



A separate document on the design of the network connection is available on the hyperdoc document platform.

6.2. Site preparation

During installation of the HYC400 it must be ensured that a minimum distance to possible objects around the hypercharger is maintained in order to ensure sufficient airflow and to have enough space available for possible service or maintenance work.

Notice



The position of the hypercharger is to be chosen in such a way that possible damage due to foreseeable circumstances is avoided. Sufficient mechanical impact protection should be provided to protect the charging station.

Figure 38 lists the recommended and minimum clearances to consider when site preparing a HYC400. The recommended distances are designed for convenient maintenance of the hypercharger, while the prescribed distances represent the absolute minimum for maintenance work, for example to be able to replace a SiC Power-Stacks.

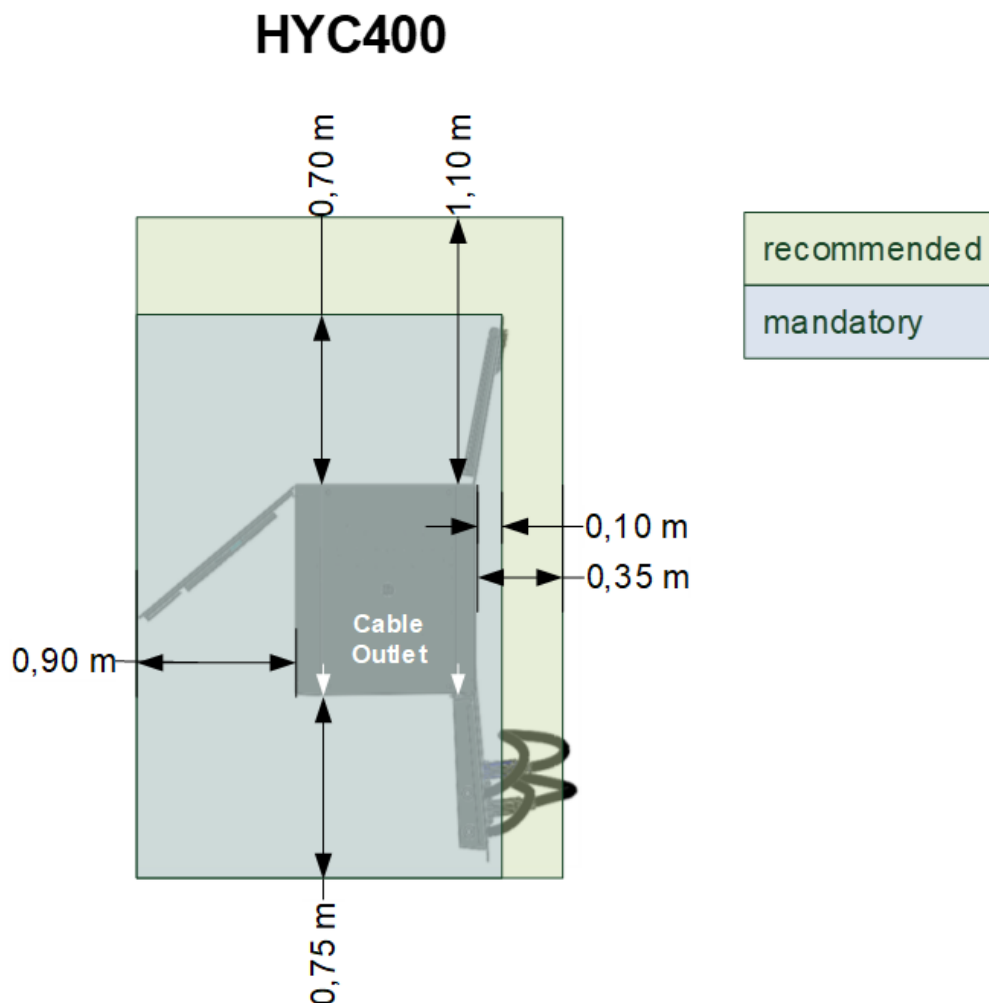


Figure 38: Recommended minimum distances for site preparation

Notice



The legal minimum widths for escape routes must be adhered to in any case.



Before installation, compliance with all legal requirements for the installation site (e.g. safety against overturning, impact protection, fire protection, effects of frost, etc.) and special operating conditions in accordance with IEC 61439-2/-7 must be checked.



Each charging cable must be located as close as possible to the parking space to be served, taking into account ergonomics and mechanical impact protection. Note the cable radius (Figure 5).



The ground condition must be firm and level in the areas shown.



If the hypercharger is installed in a closed or even partially closed environment, it must be prevented that the exhaust air is reintroduced into the supply air circuit.
Impairments to air circulation can lead to a reduction in the performance of the charging station.

6.3. Placing the concrete foundation

The hypercharger must be installed on a firm and level surface. This can be a concrete foundation or a concrete floor.

Notice



When dimensioning the foundation, proof of static stability must be provided in accordance with relevant standards.



A foundation can also be ordered as an option from alpitronic (sales@hypercharger.it).
This measures 80 x 80 x 102 cm and weighs 770 kg.

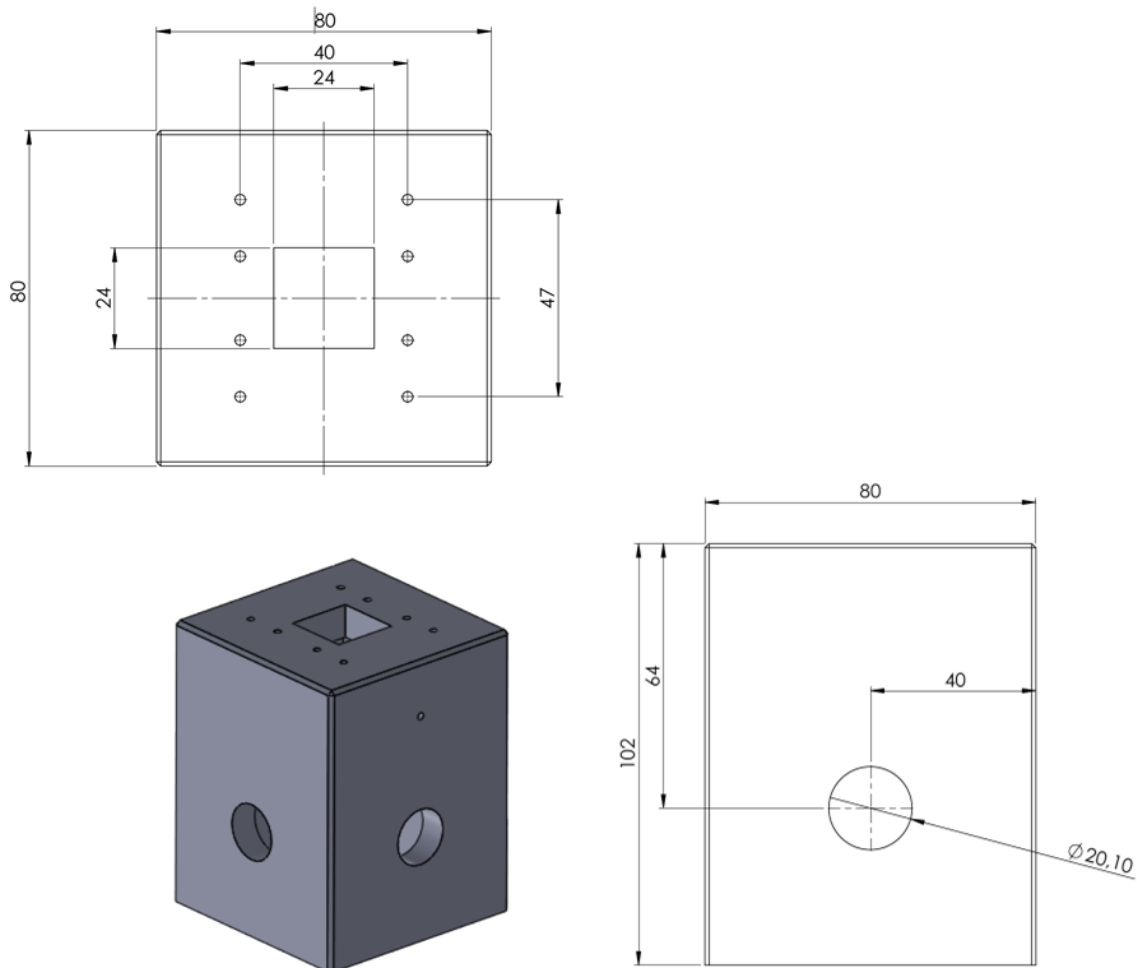


Figure 39: hypercharger concrete foundation (dimensions in cm)

Notice



The hypercharger foundation is designed for wind zones of level 3 (maximum wind speed of 27.5 m/s; wind load $q_b = 0.47 \text{ kN/m}^2$) and terrain category II.

The foundation must be raised using suitable lifting equipment, such as a crane. There are no eyelet bolts for positioning the hypercharger foundation. For this reason, it is recommended to insert a support beam (wooden beam/double-T beam) in the central opening (visible in Figure 39).

A granular subbase of at least 10 cm should be installed over an area of 1 x 1 m. The foundation must be backfilled with material GW, GI, SW, SI in accordance with DIN 18196 up to the lower edge of the base and compacted in layers.

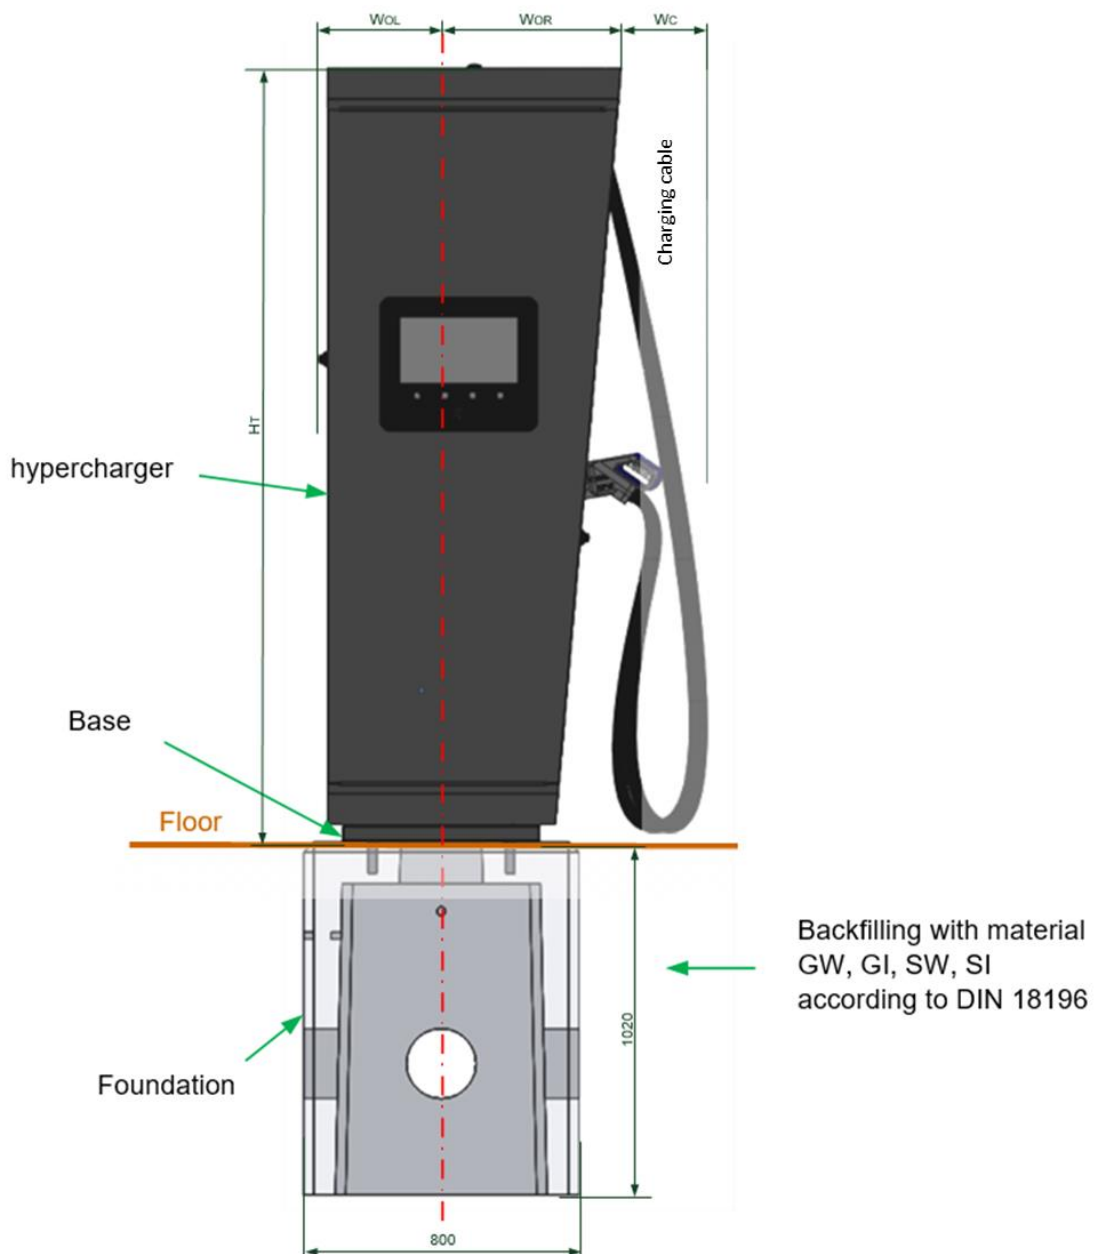


Figure 40: HYC400 on concrete foundation

Abbreviation	HYC400
H _T	2250 mm (± 3 mm)
W _C ²	300 mm
W _{OL}	357 mm (± 3 mm)
W _{OR}	516 mm (± 3 mm)

Table 18: Dimensions

Notice



Due to the concrete foundation, the bending radius of the mains cable is 0.73 m. The diameter of the side openings is 20 cm.

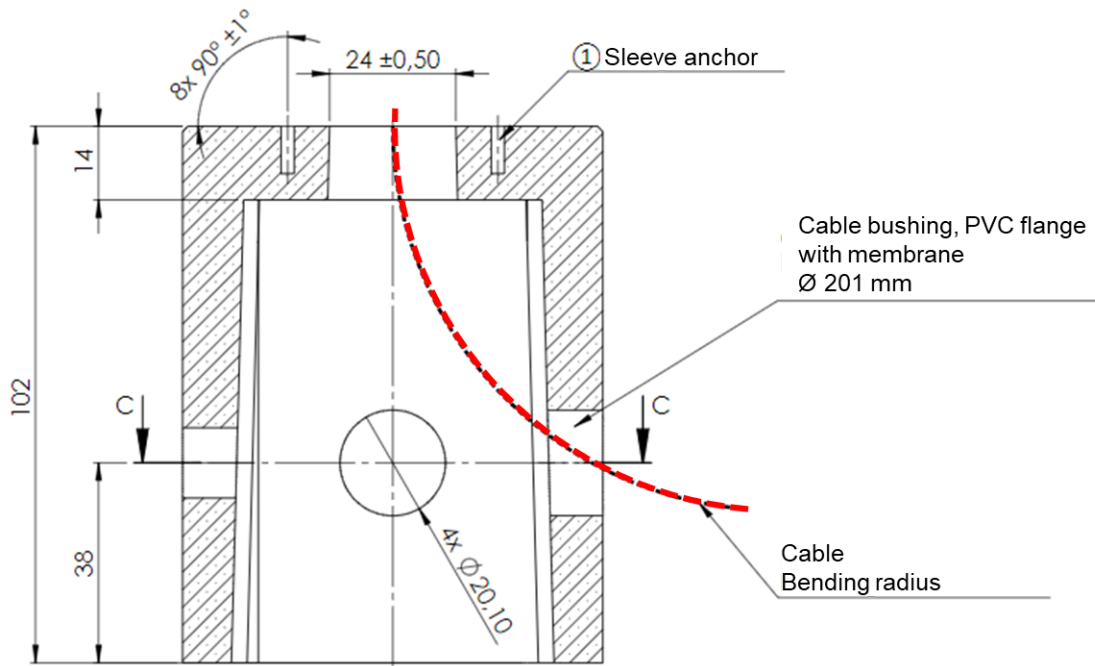


Figure 41: Mains cable bending radius

² This area may vary depending on the cable length.
manual.nalm@haywa-re.com
23.02.2024 14:00:29

6.4. Fastening the base to the foundation

The base is supplied with the charging station (Figure 42) and includes a cable entry plate with the cable glands (Figure 43).

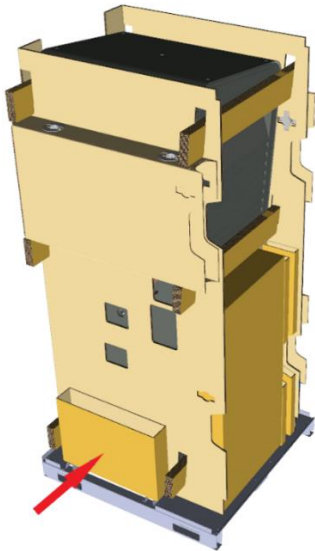


Figure 42: Packaging of base including cable entry plate


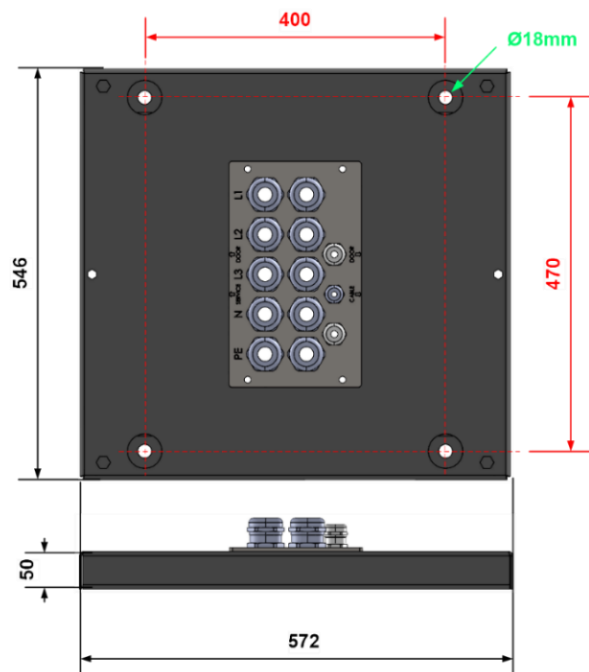


Figure 43: Base including cable entry plate (in mm)

Notice

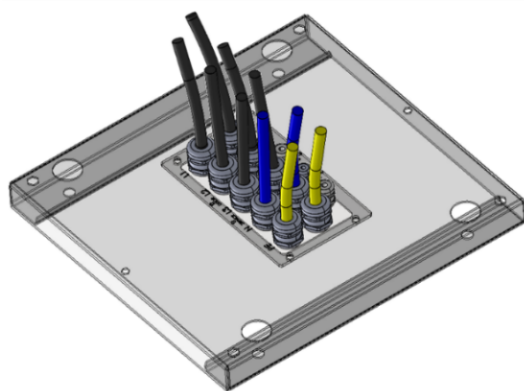

The use of the cable entry plate is absolutely necessary! Not using one can cause dust and dirt to build up, which can damage the hypercharger.

The HYC400 has double cable glands for each phase, and three additional cable glands can also be used for data cables, e.g. for load management:

Cable gland	Amount	Clamping area	Usage
M40	10	19-28 mm	2 x L1, L2, L3, N, PE
M20	1	7-13 mm	Data cable (if available)
M25	2	11-17 mm	Data cable (if available)

Table 19: Available cable glands on the hypercharger base

Notice



The required cable glands depend on the mains supply cable used. Any changes to the standard variant must be coordinated with sales@hypercharger.it when the charging station is ordered.

Warning



Before you continue with the next steps, make sure that the mains cables are completely free from voltage (see chapter 1).

Lead the mains cables from the foundation through the cable entry plate. Pay attention to both the correct position of the individual mains cables (the positions are engraved on the cable entry plate) and the correct orientation of the base itself:

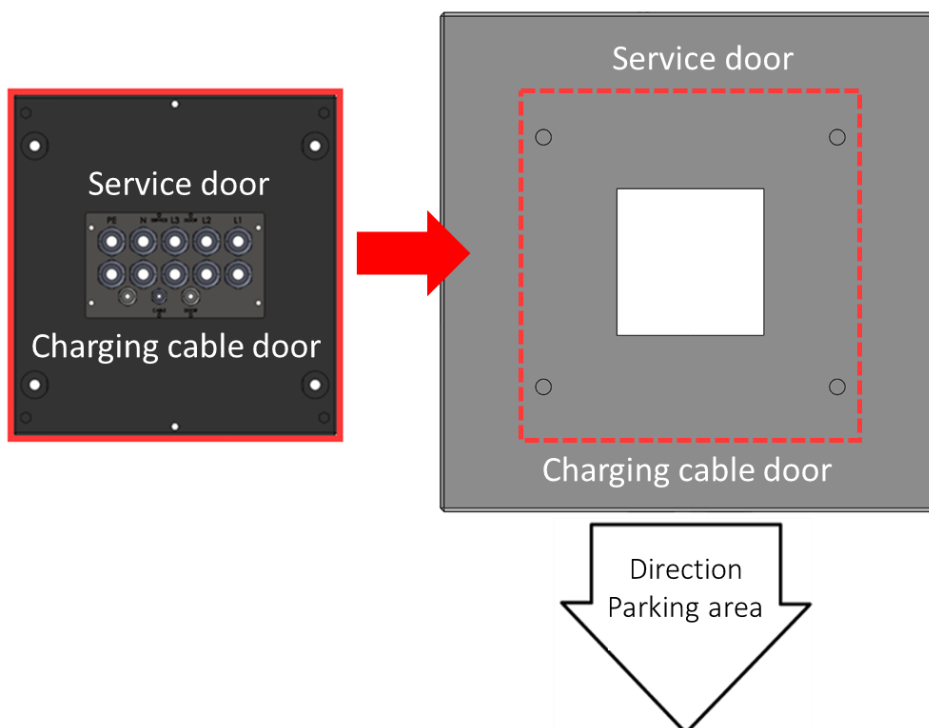


Figure 44: Alignment of base on the foundation

The external dimensions for the HYC400 (starting from the centre of the base) are shown in the following figure and given in Table 20.

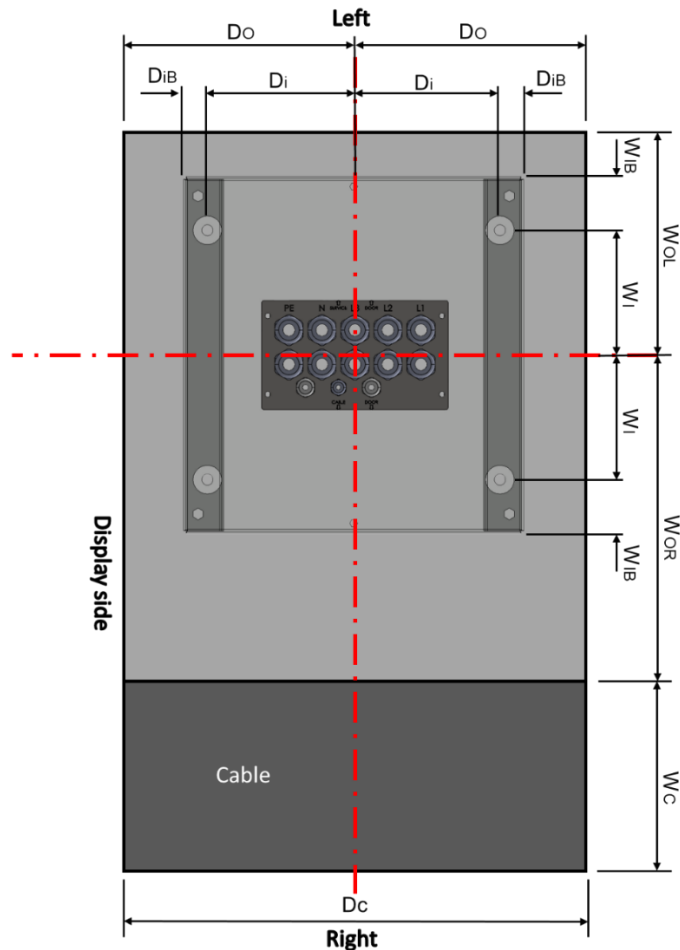


Figure 45: Distances between the base and the external dimensions of the HYC400

Abbreviation	HYC400
Dc	732 mm
Di	235 mm
DiB	38 mm (± 3 mm)
Do	366 mm (± 3 mm)
Wc	300 mm (this area may vary depending on the cable length).
Wi	200 mm
Wib	86 mm (± 3 mm)
Wol	357 mm (± 3 mm)
Wor	516 mm (± 3 mm)

Table 20: Distances from base to external dimensions of HYC400

The base can now be attached to the concrete foundation.

manuel.palm@baywa-re.com
23.02.2024 14:00:29

Notice



If a concrete foundation was ordered, 4 fixing screws (M16 x 30 mm) and washers (M16 x 3 mm) are supplied with the hypercharger.



If the foundation was not ordered separately, stainless steel screws and washers should be used.



Tighten the screws with a torque of **90 Nm**.

6.5. Preparing the mains cable

Installing the mains cable on the hypercharger (see Chapter 6.7) is difficult due to the limited installation space. For this reason, it is recommended to use a so-called **cable jig**.

This mounting aid replicates the position of the individual screw connections of the AC input switchgear and allows the mains cables to be prepared (cutting to the correct length, correct positioning) before the hypercharger has been positioned and secured on the base.

Notice



The cable jig can be ordered at sales@hypercharger.it.

Attach the cable jig to the base.


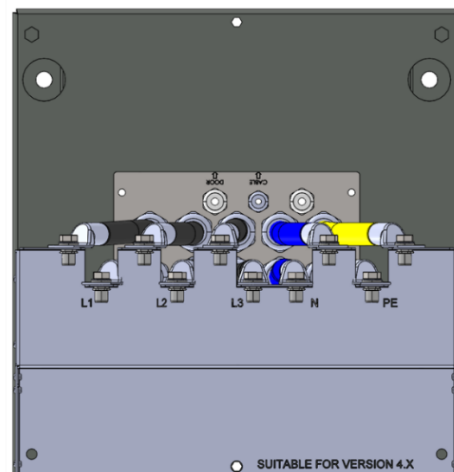


Figure 46: Cable jig for preparing the mains cable

Now shorten all mains cables to the intended length, fit them with suitable cable lugs and fix them to the ends of the mains cables with suitable crimping pliers.

Notice

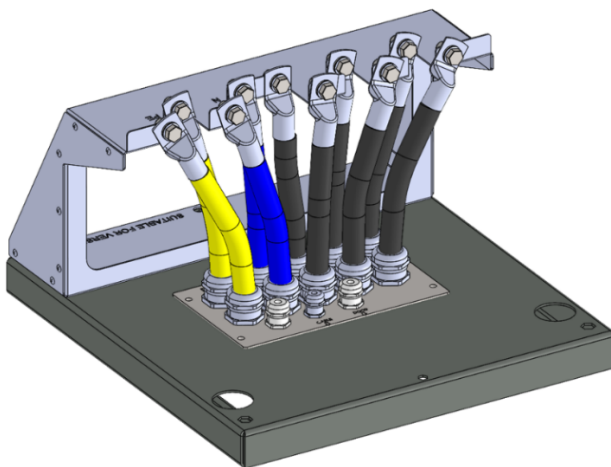

Cable lugs must be used between M12 and M16. M16 should preferably be used, as this increases the tolerance compensation for the position of the cable lug.

After the cable lugs have been screwed onto the cable jig, the cable glands can be tightened, thereby fixing the connection points in the correct position.

Notice



All cable glands have to be tightened with an appropriate tool. If certain screw connections are not used, these must also be tightened and provided with a dummy plug (included in delivery) (see Figure 47).



Figure 47: Tighten cable glands

Before proceeding with installation, remove the cable jig and apply heat shrink tubing to all lead wires.

6.6. Attaching the hypercharger to the base

Now the hypercharger can be attached to the base.

To do this, the hypercharger must be removed from the metal pallet. To do this, open all doors of the hypercharger.

Notice



Make sure the doors are opened in the correct order (see chapter 4.4).

If cooling units are present, it is recommended that they be removed due to limited installation space in order to facilitate later installation of the mains cables. To do this, the cooling unit must be unplugged and the fixing screws loosened.

Warning



Before the hypercharger is removed from its attachment, it must be secured against tipping over (e.g. by attaching the crane hooks to the 4 eyelets on the top of the charging station).

Now the fastening of the hypercharger to the metal pallet can be removed and the hypercharger can be lifted with a crane.

If there is no crane plate available to distribute the weight, there is a risk that the roof of the hypercharger will bend. To avoid this, the angle of the lifting strap should be a maximum of 55° and the distance between the roof and the crane hook should be at least 775 mm (see Figure 36).

Then position the hypercharger on the base and screw it into place at the four fastening points.



Figure 48: Positioning and attaching the HYC400 on the base

Notice



To fasten it, use the screws and washers with which the hypercharger is attached to the metal pallet upon delivery (four M12 x 30 mm screws and 32 mm washers). Alternatively, 30 or 40 mm washers can also be used.



Tighten the screws with a torque of **90 Nm**.

6.7. Attaching the mains cable

After the hypercharger has been mechanically installed, the power lines can be connected to the busbars of the input switchgear.

Notice



The screws (M12 x 25 and M12 x 70) on the input rails are already present.



Due to the limited installation space, the mains cables are mounted offset on the busbars of the input switchgear. To ensure correct positioning, the 5 brass sleeves supplied must therefore be fitted to the outer cable connections (see red markings in Figure 49).



In the new version of the cable jig, the offsets of the screw connections are already modelled (see Figure 46). The brass sleeves therefore do not need to be attached to the cable jig when preparing the power cables. If you are still using a cable jig without offsets, the brass sleeves must also be used when preparing the power cables on the cable jig.



The brass sleeves have a length of 45 mm, an outer diameter of 30 mm and an inner drilling diameter of 13 mm.

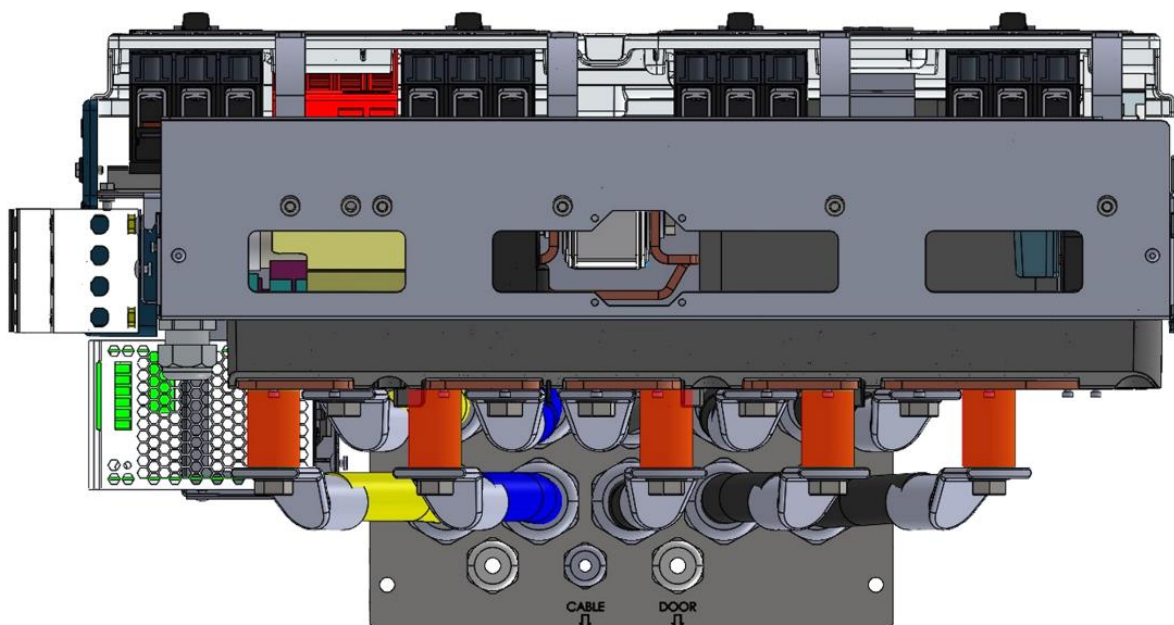


Figure 49: Brass sleeves on the cable jig

Fasten the cable lugs of the mains cables directly to the busbars or brass sleeves using a standard M12 washer (DIN125), a contact washer and an M12 screw.

Notice



Tighten the screws with a torque of **35 Nm**.

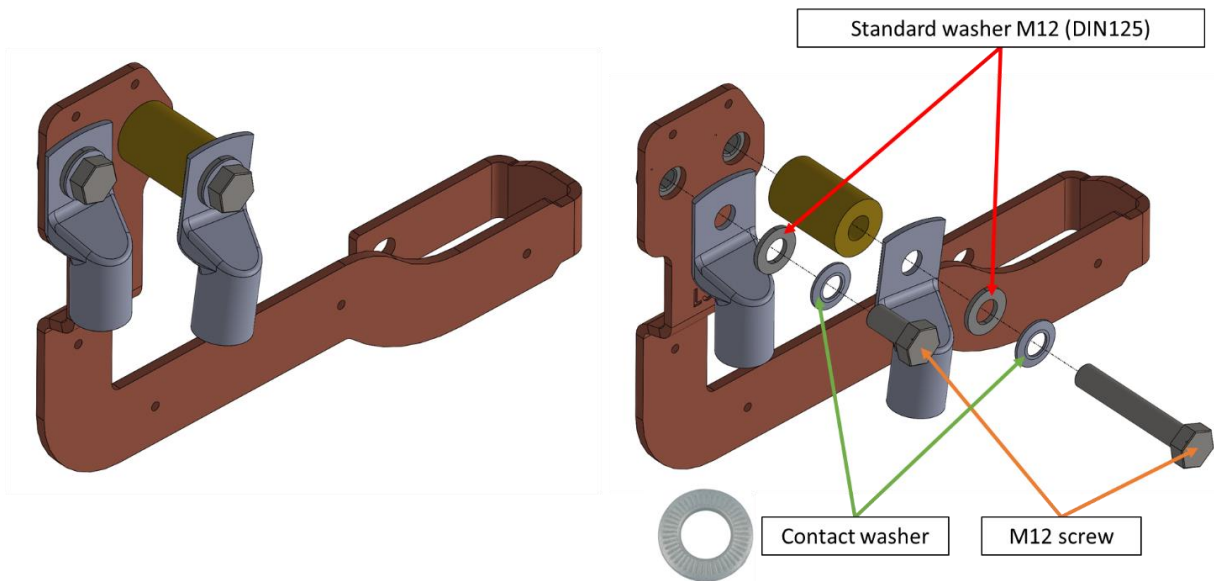


Figure 50: Fastening the cable lugs



After connecting the mains cables, be sure to attach the appropriate plexiglass covers.

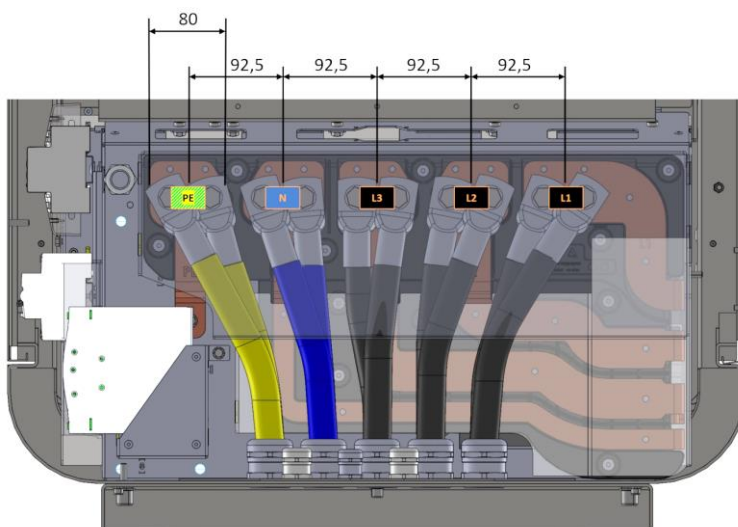


Figure 51: Screw connection of the mains cables to the conductor rails (in mm)

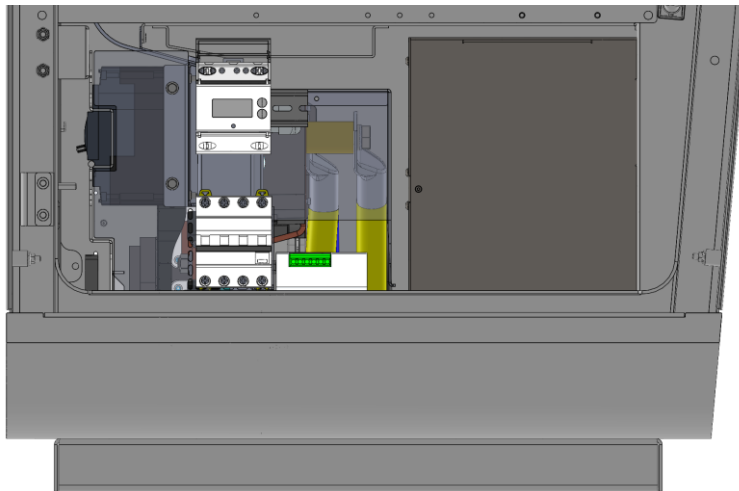


Figure 52: Side view of the mains cable connection

6.8. Final steps

Finally, reinstall the cooling unit if available. Fasten them and connect the connector and the cooling hoses.

Close all doors properly again.

Unpack the charging cables and insert them into the corresponding cable plug holders.

In addition, the lifting eyes should be removed and the locking screws, which are included in the scope of delivery, should be attached.

7. Commissioning

Correct commissioning and checking of the safety devices is required for safe operation of the charging station.

Attention



Adhere to all safety warnings outlined in Chapter 1 of this manual.



Before commissioning, check whether the charging station and all associated connections have been properly installed in accordance with this manual.

Warning



Make sure that all live parts are equipped with the appropriate touch protection before the device is switched on.

Notice



The commissioning of the charging stations may only be carried out by professionally qualified individuals, as per local regulations and safety standards. These individuals must also have successfully completed the mandatory training courses provided by alpitronic.

Further information about these training courses is available on the website <https://training.hypercharger.it/>.



All of the following commissioning checks are mandatory. These must be carried out by filling out the **digital commissioning protocol** on hyperdoc and sending it (including photo documentation) to alpitronic.

Improper commissioning and the lack of a corresponding commissioning protocol can lead to the warranty becoming void.

For hyperdoc registration: <https://account.hypercharger.it/register> (the digital protocols are only available to appropriately trained technicians (see above)).

All the points listed below are binding and must be carried out by the operator of the hypercharger (or the installation company commissioned by them) **at the time of commissioning**.

Depending on the individual conditions of use of the hypercharger, further checks may be necessary. Therefore, the following list should not be taken as complete.

Commissioning checks	Description
External visual inspection	<ul style="list-style-type: none"> Condition of housing IP degree of protection (IP54) Stability Accessibility
Checking charging cables & plugs	<ul style="list-style-type: none"> Checking all cable parts (cable sleeve, cable, cable plug, mating face, pins) for the absence of damage (e.g. cable sheath intact, no crushing or cracks, pins undamaged, cable intact at transfer point, etc.) Are all outside cable glands tight? For cooled cables (if available). Check that drainage openings are clear
Checking the input mains cable glands	Visually verify that the input mains cable glands are tight
Checking screws	<ul style="list-style-type: none"> Visual random check of internal screw connections Random check of tightening torques
Check the cooling unit (if available), and replace coolant if necessary	<ul style="list-style-type: none"> filling level Connection Absence of air pockets & creases Coolant concentration Coolant PH-value
Check for cleanliness	Check the cleanliness inside the charging station
Check condensation	Check for the absence of traces of condensation inside the charging station
Check filter mats	Check integrity
Check protective measures	<ul style="list-style-type: none"> Visual inspection of the earthing system Test earthing resistance Test continuity of the equipotential bonding connections
Checks on the supply line	<ul style="list-style-type: none"> Testing the insulation resistance on the busbars of the input switchgear / main switch (mains side) Information on the existing protective device Verification of the security
Verification of insulation resistances DC charging outlets	Check the insulation resistance of the pins for each existing DC charging outlet
Verification of RCD for AC	<ul style="list-style-type: none"> Test activation time & current DC Test activation time & current AC Test activation time & current, as well as the loop impedance ZL1-PE on the service socket (XD2)
Verification of the cooling unit	Verification of fan & pump noise
Touch protection	Check whether all protective covers have been correctly attached after the electrical installation
Check RFID reader	Functional test of the RFID reader

Check connectivity of SIM cards	<ul style="list-style-type: none">• Check the connection to the alpitronic backend• Check the connection to the customer backend
Check the display elements	<ul style="list-style-type: none">• Functional test of the display + button• Functional test of the screen display and, if necessary, the touch screen of the credit card terminal
Verification of LED rings	Functional test of the LED rings on the connectors
Suitability check / checking of components relevant to calibration law (if available, see appendix to calibration law for details)	<ul style="list-style-type: none">• Type plate• Cabling relevant to calibration law• Plastic seals on DC and/or AC meters• Adhesive seal• Overlay

Table 21: Checks to be carried out during commissioning

Notice



Separate instructions are available on the hyperdoc document platform for operating the HYC400 (details on the charging process, how to proceed in the event of error messages).

8. Diagnosis and parameterisation

After successful mechanical and electrical installation of the hypercharger, the correct function of the device can be checked using a diagnostic and parameterisation tool. The so-called **Webinterface** can be loaded via any browser with a standard IP address:

Default IP address	192.168.1.100
---------------------------	---------------

Table 22: Standard IP address of the hypercharger

Notice



Further information about the webinterface can be found in the corresponding configuration manual, which is available on the hyperdoc document platform.

9. Error description and correction

Attention



Adhere to all safety warnings outlined in Chapter 1 of this manual.

Description of fault	Possible error cause	Troubleshooting
The display remains black	No power supply	Check whether all circuit breakers are switched on.
A SiC Power-Stack cannot be switched on	The SiC Power-Stack circuit breaker (-QA1-QA4) is switched off	Turn on the appropriate circuit breaker.
No communication from the backend	No connection via Ethernet or mobile network	Check the connection of the Ethernet network (-XF2) and/or the antenna (-TF1). Start the charging station in diagnostic mode and use the diagnostic tool for further error localization.
Charging not possible	Error in the configuration of the charging station	Start the charging station in diagnostic mode and use the diagnostic tool for further error localization.

Table 23: Error description and correction

10. Preventive Maintenance

For the safe operation of the charging station, annual maintenance of the charging station and a check of its safety devices is required. Depending on the installation location of the charging station and the environmental influences prevailing there (such as dirt, moisture, etc.), shorter maintenance intervals may also be necessary for certain components. Regular inspection is therefore recommended.

Attention



Adhere to all safety warnings outlined in Chapter 1 of this manual.

Notice



The preventive maintenance of the charging stations may only be carried out by professionally qualified individuals, as per local regulations and safety standards. These individuals must also have successfully completed the mandatory training courses provided by alpitronic.

Further information about these training courses is available on the website <https://training.hypercharger.it/>.



All of the following preventive maintenance work is mandatory. These must be carried out by filling out the **digital maintenance protocol** on hyperdoc and sending it (including photo documentation) to alpitronic.

Failure to maintain an appropriate maintenance protocol may void the warranty.

For hyperdoc registration: <https://account.hypercharger.it/register> (the digital protocols are only available to appropriately trained technicians (see above)).

Depending on the individual operating conditions of the hypercharger, further maintenance work may be necessary. Therefore, the following list should not be taken as complete.

Maintenance work	Description
External visual inspection	<ul style="list-style-type: none"> Condition of housing IP degree of protection (IP54) Stability Accessibility Credit card terminal (if available)
Checking charging cables & plugs	<ul style="list-style-type: none"> Checking all cable parts (cable sleeve, cable, cable plug, mating face, pins) for the absence of damage (e.g. cable sheath intact, no crushing or cracks, pins undamaged, cable intact at transfer point, etc.) Are all outside cable glands tight? For cooled cables (if available). Check that drainage openings are clear
Checking the input mains cable glands	Visually verify that the input mains cable glands are tight
Checking screws	<ul style="list-style-type: none"> Visual random check of internal screw connections Random check of tightening torques
Check the cooling unit (if available), and replace coolant if necessary	<ul style="list-style-type: none"> Filling level Connection Absence of air pockets & creases Coolant concentration Coolant PH-value
Check for cleanliness	Check the cleanliness inside the charging station
Check condensation	Check for the absence of traces of condensation inside the charging station
Check and replace filter mats if necessary	Checking for integrity and contamination
Review of protective measures	<ul style="list-style-type: none"> Visual inspection of the earthing system Test earthing resistance Test continuity of the equipotential bonding connections
Check the supply line (only if there is no commissioning protocol)	<ul style="list-style-type: none"> Testing the insulation resistance on the busbars of the input switchgear / main switch (mains side) Information on the existing protective device Check short-circuit current
Checking insulation resistance of DC charging outlets	Check the insulation resistance of the pins for each existing DC charging outlet
Verification of RCD for AC	<ul style="list-style-type: none"> Test activation time & current DC Test activation time & current AC Test activation time & current, as well as the loop impedance ZL1-PE on the service socket (XD2)
Check overvoltage protection	Check the optical defect display of the overvoltage protection
Check residual current protective devices	Functional test of the circuit breakers with residual current monitoring
Touch protection	Check whether all protective covers have been correctly attached
Check main switch	Functional test of the main switch QB1
Verification of the cooling unit	Verification of fan & pump noise
Check RFID reader	Functional test of the RFID reader

Check connectivity of SIM cards	<ul style="list-style-type: none"> • Check the connection to the alpitronic backend • Check the connection to the customer backend
Check the display element	<ul style="list-style-type: none"> • Functional test of the display + button • Functional test of the screen display and, if necessary, the touch screen of the credit card terminal
Verification of LED rings	Functional test of the LED rings on the connectors
Suitability check / checking of components relevant to calibration law (if available, see appendix to calibration law for details)	<ul style="list-style-type: none"> • Type plate • Cabling relevant to calibration law • Plastic seals on DC and/or AC meters • Adhesive seal • Overlay • Recalibration of measuring devices that are compliant with calibration law • If necessary, functional tests including accuracy tests

Table 24: Annual maintenance work

11. Reparation and service

The modular design of the hypercharger enables easy repair of defective components.

Warning



Adhere to all safety warnings outlined in Chapter 1 of this manual.

Notice



Please note that repairs to the hypercharger **are only** carried out by professionally qualified individuals, as per local regulations and safety standards. These individuals must also have successfully completed the mandatory training courses provided by alpitronic.

All necessary legal and safety measures must be observed!



Be sure to consult hypercharger support before repairs are carried out. support@hypercharger.it or +39 0471 1961 333



Every repair and every component replacement must be reported to support@hypercharger.it, including the serial numbers of the individual parts.



To order spare parts, contact aftersales@hypercharger.it.

hypercharger support is available around the clock (24/7) by phone on +39 0471 1961 333 or by email (support@hypercharger.it).

12. Disposal

Electrical and electronic equipment contains materials, components and substances that may be hazardous and pose a threat to human health and the environment. Therefore, the hypercharger and its components must not be disposed of with household waste, but must be collected separately.

The hypercharger is subject to the WEEE Directive 2012/19/EU (Waste of Electrical and Electronic Equipment), which is implemented differently in the EU countries. Depending on the country, traders and/or manufacturers must register and report the exported quantities of electrical and electronic equipment and, if necessary, pay a fee.

The packaging made of wood/cardboard and plastic, as well as the 3V button battery (BR1225) contained in the CTRL_COM circuit board must be disposed of separately.

Please contact your local authority for suitable collection points.

Notice



For more information, please contact hypercharger support or contact a dedicated WEEE Advisory Service directly.

13. Technical data

13.1. General technical data

Parameter	Nominal value
Type of protection	IP54
Place of assembly	Indoors and outdoors
Humidity transport or storage area	0 - 95% rel. (not condensing)
Operating humidity range	0 - 95% rel.
Storage temperature range	-40 °C to +55 °C
Operating temperature range	-30 °C to +55 °C (+40 to +55 °C with derating)
Corrosion protection class	C3
Mechanical shock resistance (IEC62262)	IK10
Type of fastening	Floor mounting (base)
Accessibility	Without restrictions
Installation height	Up to a maximum of 4,000 m above sea level
Protection class	Class I (Protective earthing)
Supported charging modes	Mode 4 with optional 22 kW AC charging (Mode 3)
Max. air flow	2400 m ³ /h

Table 25: General technical data

Notice



The full performance potential is not guaranteed at every temperature and altitude.

13.2. Mechanical data

Type	Width [mm]	Height [mm]	Depth [mm]	Weight [kg]
HYC400	732	2250	854	See Table 17

Table 26: Mechanical data

13.3. Electrical Connection Data

Notice



The hyperchargers are intended for direct connection to the supply network.

Parameter	Nominal value
Operating voltage U_{NOM}	400Vac +N +PE (+10 % / -15 %)
Network types	TT, TN-S, TN-C, TN-CS
Frequency	50/60 Hz (± 5 %)
Maximum nominal current I_{NOM}	630 A
Contribution to short circuit current	Max. I_{NOM}
Typical efficiency*	> 97 %
Maximum back-up security to be provided (mandatory)	800 A gG (gL)
Maximum connection cross-section	240 mm ²
Permissible outer diameter of the supply line	19-28 mm
Permissible rated short-time current I_{cw}	50 kA @I-duration 20ms
Ratio of max. rated short-circuit current I_{pk} to I_{cw}	$I_{pk} / I_{cw} \leq 1.8$
Overvoltage category	OVC III
Integrated overvoltage protection (SPD)	Type 1+2
Cross-section of the connection terminals	M12 thread

Table 27: Electrical Connection Data

* For further details, please contact our sales department.

13.4. Radio communication

The HYC400 radio modem supports the following frequency bands:

Frequency band	Transmission level (maximum nominal power)
WCDMA B1, B8 (UMTS900, UMTS2100)	24 dBm
LTE FDD B1, B3, B7, B8, B20, B28	23 dBm
GSM 900	33 dBm
GSM 1800	30 dBm

Table 28: Frequency bands and transmission levels

13.5. Typical standby power consumption

Type	Power level	Power [W]
HYC400	Energy-saving mode	66 W
	Standby mode	270 W

Table 29: No-load power dissipation at 400 V AC

14. Declaration of Conformity



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

CE KONFORMITÄTSEKTLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY

**Quadri elettrici per bassa tensione
secondo IEC EN 61439-7**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

Hersteller:	alpitronic GmbH – srl	Tel. +39 0471 1961 000
Costruttore:	Via di Mezzo ai Piani 33	Fax: +39 0471 1961 451
Manufacturer:	I-39100 Bolzano	info@alpitronic.it
Schaltgerätekombination / Ladestation:	Ladestation für DC-Laden	
Quadro elettrico / colonnina:	Colonnina DC Charger	
Switchgear assembly / charging station:	EV Charging Station	
Anlage:		
Impianto:	HYPERCHARGER	
Plant:		
Typ-Nr.:		
N°. tipo:	HYC_400	
Type no.:		
Jahr der Anbringung der Kennzeichnung:		
Anno di apposizione della marcatura CE:	2023	
Year of affixing CE marking:		

Die Firma **alpitronic GmbH** mit Sitz in I-39100 Bozen, Hersteller der oben beschriebenen Schaltgerätekombination (Ladesäule) erklärt aus eigener Verantwortung, dass die Schaltgerätekombination Konformität mit den Bestimmungen der folgenden gemeinschaftlichen Richtlinien aufweist, wie auch mit der entsprechenden nationalen Gesetzgebung

La ditta **alpitronic srl** con sede a I-39100 Bolzano, costruttrice del quadro elettrico (colonnina) sopra descritto, dichiara sotto la propria responsabilità che il quadro elettrico risulta conforme con quanto previsto dalle seguenti direttive comunitarie, nonché alla relativa legislazione nazionale di recepimento

The company **alpitronic srl** located in I-39100 Bolzano, manufacturer of the above mentioned switchgear assembly (charging station), declares under its own responsibility that the switchgear assembly conforms to what is foreseen by the following European Community directives, as well as to the relative national implementation legislation

Bezug	Riferimento	Reference
Die Richtlinie 2014/35/EU Niederspannungs-Richtlinie	La direttiva 2014/35/EU Direttiva bassa tensione	Directive 2014/35/EU Low Voltage Directive
Die Richtlinie 2014/30/EU EMV-Richtlinie	La direttiva 2014/30/EU Direttiva EMC	Directive 2014/30/EU EMC-Directive
Die Funkanlagenrichtlinie RED 2014/53/EU	Radio Equipment Directive RED 2014/53/EU	Radio Equipment Directive RED 2014/53/EU
und dass die folgende harmonisierte Norm angewendet wurde	e che è stata applicata la seguente norma armonizzata	and that the following harmonized Standard has been applied
Norm Code	Codice norma	Standard code
IEC EN 61439-1: 2021 Niederspannungs-Schaltgerätekombinationen (NS-SK) Teil 1: Allgemeine Festlegungen	IEC EN 61439-1: 2021 Apparecchiature assiemate di protezione e manovra per bassa tensione (quadri BT) Parte 1: Regole Generali	IEC EN 61439-1: 2021 Low voltage switchgear and control gear assemblies Part 1: General Rules
IEC TS 61439-7: 2021 Niederspannungs-Schaltgerätekombinationen Teil 7: Schaltgerätekombinationen für bestimmte Anwendung wie Marinas, Campingplätze, Marktplätze, Ladestationen für Elektrofahrzeuge	IEC TS 61439-7: 2021 Apparecchiature assiemate di protezione e manovra per bassa tensione Parte 7: Applicazioni speciali per porti di marina, campeggi, piazze di mercato, colonnine per ricarica di veicoli stradali elettrici	IEC TS 61439-7: 2021 Low voltage switchgear and control gear assemblies Part 7: Assemblies for specific applications such as marinas, camping sites, market squares, electrical vehicles charging station

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

Managing Director

manuel.palm@baywa-re.com
23.02.2024 14:00:29



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

**CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

IEC EN 61851-1: 2021
Elektrische Ausrüstung von Elektrofahrzeugen –
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 1: Allgemeine Anforderungen

IEC EN 61851-1: 2021
Equipaggiamento elettrico per veicoli elettrici –
Sistemi conduttivi di ricarica
Parte 1: Requisiti Generali

IEC EN 61851-1: 2021
Electric vehicle conductive charging system
Part 1: General requirements

IEC EN 61851-21-2: 2018
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 21-2: EMV-Anforderungen an externe
Ladesysteme für Elektrofahrzeuge

IEC EN 61851-21-2: 2018
Sistemi conduttivi di ricarica per veicoli elettrici
Parte 21-2: Requisiti EMV per sistemi esterni di
ricarica per veicoli elettrici

IEC EN 61851-21-2: 2018
Electric vehicle conductive charging system
Part 21-2: EMC requirements for OFF board
electric vehicle charging systems

IEC EN 61851-23: 2016
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 23: Gleichstromladestationen für
Elektrofahrzeuge

IEC EN 61851-23: 2016
Sistemi conduttivi di ricarica per veicoli elettrici
Parte 23: Sistemi di ricarica in DC per veicoli
elettrici

IEC EN 61851-23: 2016
Electric vehicle conductive charging system
Part 23: DC electric vehicle charging station

IEC EN 61851-24: 2014
Konduktive Ladesysteme für Elektrofahrzeuge
Teil 24: Digitale Kommunikation zwischen einer
Gleichstromladestation für Elektrofahrzeuge
und dem Elektrofahrzeug zur Steuerung des
Gleichstromladevorgangs

IEC EN 61851-24: 2014
Sistemi conduttivi di ricarica per veicoli stradali
elettrici
Parte 24: Comunicazione digitale tra la
colonnina d.c. charge e il veicolo elettrico per il
controllo della carica in d.c.

IEC EN 61851-24: 2014
Electric vehicle conductive charging system
Part 24: Digital communication between a d.c.
EV charging station and an electric vehicle for
control of d.c. charging

IEC 61000-6-4 (2007) +A1 (2011)
IEC 61000-6-2 (2005)
IEC 61000-4-2 (2008)
IEC 61000-4-3 (2006) +A1 (2007) +A2 (2010)
IEC 61000-4-6 (2013)
IEC 61000-4-4 (2012)
IEC 61000-4-5 (2014)
IEC 61000-4-8 (2009)

IEC 61000-6-4 (2007) +A1 (2011)
IEC 61000-6-2 (2005)
IEC 61000-4-2 (2008)
IEC 61000-4-3 (2006) +A1 (2007) +A2 (2010)
IEC 61000-4-6 (2013)
IEC 61000-4-4 (2012)
IEC 61000-4-5 (2014)
IEC 61000-4-8 (2009)

IEC 61000-6-4 (2007) +A1 (2011)
IEC 61000-6-2 (2005)
IEC 61000-4-2 (2008)
IEC 61000-4-3 (2006) +A1 (2007) +A2 (2010)
IEC 61000-4-6 (2013)
IEC 61000-4-4 (2012)
IEC 61000-4-5 (2014)
IEC 61000-4-8 (2009)

IEC 60364-4-41: 2005+AMD
Errichten von Niederspannungsanlagen – Teil
4-41: Schutzmaßnahmen; Schutz gegen
elektrischen Schlag

IEC 60364-4-41: 2005+AMD
Installazioni elettriche a bassa tensione – Parte
4-41: Protezione per la sicurezza - Protezione
contro le scosse elettriche

IEC 60364-4-41: 2005+AMD
Low voltage electrical installations – Part 4-41:
Protection for safety - Protection against
electric shock

IEC 60364-4-43: 2021
Errichten von Niederspannungsanlagen – Teil
4-43: Schutzmaßnahmen - Schutz bei
Überstrom

IEC 60364-4-43: 2021
Installazioni elettriche a bassa tensione – Parte
4-43: Protezione per la sicurezza - Protezione
contro le sovracorrenti

IEC 60364-4-43: 2021
Low-voltage electrical installations – Part 4-43:
Protection for safety - Protection against
overcurrent

HD 60364-7-722: 2016
Errichtung von Niederspannungsanlagen – Teil
7-722: Anforderungen für Betriebsstätten,
Räume und Anlagen besonderer Art –
Stromversorgung für Elektrofahrzeuge

HD 60364-7-722: 2016
Installazioni elettriche a bassa tensione – Parte
7-722: Requisiti per installazioni o ubicazioni
speciali - Forniture per veicoli elettrici

HD 60364-7-722: 2016
Low-voltage electrical installations – Part 7-
722: Requirements for special installations or
locations – Supplies for electric vehicles

EN 301 489-1 V2.2.3
Elektromagnetische Verträglichkeit für
Funkrichtungen und -dienste - Teil 1:
Gemeinsame technische Anforderungen

EN 301 489-1 V2.2.3
Compatibilità elettromagnetica e questioni
relative allo spettro delle radiofrequenze (ERM)
– Parte 1: Requisiti tecnici comuni

EN 301 489-1 V2.2.3
Electro Magnetic Compatibility (EMC) standard
for radio equipment and services - Part 1:
Common technical requirement

EN 301 489-3 V2.1.1
Elektromagnetische Verträglichkeit für
Funkrichtungen und -dienste - Teil 3:
Spezifische Bedingungen für Funkgeräte
geringer Reichweite (SRD)

EN 301 489-3 V2.1.1
Compatibilità elettromagnetica e questioni
relative allo spettro delle radiofrequenze (ERM)
– Parte 3: Condizioni specifiche per dispositivi a
breve portata (SRD)

EN 301 489-3 V2.1.1
Electro Magnetic Compatibility (EMC)
standard for radio equipment and services;
Part 3: Specific conditions for Short-Range
Devices (SRD)

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

Managing Director
Philipp Schwan



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

**CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY**

**Quadri elettrici per bassa tensione
secondo IEC EN 61439-7**



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

EN 301 489-52 V1.1.0
Elektromagnetische Verträglichkeit für
Funkeinrichtungen und -dienste - Teil 52:
Spezifische Bedingungen für mobile und
tragbare zellulare Funkeinrichtungen (UE)

EN 301 489-52 V1.1.0
Compatibilità elettromagnetica e questioni
relative allo spettro delle radiofrequenze (ERM)
– Parte 52: Condizioni specifiche per
apparecchiature radio mobili cellulari e portatili
(UE)

EN 301 489-52 V1.1.0
Electromagnetic Compatibility (EMC)
standard for radio equipment and services;
Part 52: Specific conditions for Cellular
Communication Mobile and portable (UE)

EN 300 330 V2.1.1
Funkanlagen mit geringer Reichweite (SRD) -
Funkgeräte im Frequenzbereich 9 kHz bis
25 MHz und induktive Schleifensysteme im
Frequenzbereich 9 kHz bis 30 MHz

EN 300 330 V2.1.1
Dispositivi a breve portata (SRD);
Apparecchiature radio da utilizzare nella
gamma di frequenze da 9 kHz a 25 MHz e
sistemi con spire induttive nella gamma di
frequenza da 9 kHz a 30 MHz

EN 300 330 V2.1.1
Short Range Devices (SRD) - Radio equipment
in the frequency range 9 kHz to 25 MHz and
inductive loop systems in the frequency range
9 kHz to 30 MHz

EN 62311: 2020
Bewertung von elektrischen und
elektronischen Einrichtungen in Bezug auf
Begrenzungen der Exposition von Personen in
elektromagnetischen Feldern (0 Hz bis
300 GHz)

EN 62311: 2020
Valutazione degli apparecchi elettronici ed
elettrici in relazione ai limiti di base per
l'esposizione umana ai campi elettromagnetici
(0 Hz - 300 GHz) IEC 62311:2007 (Modificata)

EN 62311: 2020
Assessment of electronic and electrical
equipment related to human exposure
restrictions for electromagnetic fields (0 Hz –
300 GHz)

EN 50364: 2010
Produktnorm für die Exposition von Personen
gegenüber elektromagnetischen Feldern von
Geräten, die im Frequenzbereich von 0 Hz bis
300 GHz betrieben und in der elektronischen
Artikelüberwachung (EAS), Hochfrequenz-
Identifizierung (RFID) und ähnlichen
Anwendungen verwendet werden

EN 50364: 2010
Limitazione dell'esposizione umana ai campi
elettromagnetici prodotti da dispositivi
operanti nella gamma di frequenza 0 Hz - 300
GHz, utilizzati nei sistemi elettronici
antitaccheggio (EAS), nei sistemi di
identificazione a radio frequenza (RFID) e in
applicazioni similari

EN 50364: 2010
Product standard for human exposure to
electromagnetic fields from devices operating
in the frequency range 0 Hz to 300 GHz, used in
Electronic Article Surveillance (EAS), Radio
Frequency Identification (RFID) and similar
applications

Der Hersteller erklärt unter der eigenen
Verantwortung, dass die oben beschriebene
Schaltgerätekombination (Ladesäule) fach-
gerecht und entsprechend aller Spezifikationen,
die in der Norm IEC EN 61439 und IEC EN 61851
vorgesehen sind, realisiert worden ist.

La ditta costruttrice dichiara sotto la propria
responsabilità, che il quadro elettrico
(colonnina) sopra descritto è stato realizzato a
regola d'arte e conformemente a tutte le
specifiche previste dalla Norma IEC EN 61439 e
IEC EN 61851.

The manufacturer declares under its own
responsibility, that the above-mentioned
switchgear assembly (charging system) has
been constructed according to the state of the
art and in compliance with all the specifications
provided by the Standard IEC 61439 and IEC EN
61851.

Er erklärt außerdem, CE-zertifizierte
Komponenten verwendet zu haben, die
Auswahlkriterien und die Montageanleitungen
beachtet zu haben, die in den entsprechenden
Katalogen und Datenblättern angegeben sind,
und während der Montage oder durch Umbau
die Leistungen des verwendeten Materials, die
in den schon genannten Katalogen erklärt
werden, auf keinerlei Weise gefährdet zu
haben.

Dichiara inoltre di avere utilizzato componenti
certificati CE, di avere rispettato i criteri di scelta
e le istruzioni di montaggio indicate sui relativi
cataloghi e fogli d'istruzione e di non avere
compromesso in alcun modo, durante il
montaggio o attraverso modifiche, le
prestazioni del materiale utilizzato dichiarate sui
già citati cataloghi.

Also declares that CE certificated components
have been used, and the assembly instructions
reported in the relevant catalogues and on the
instruction sheets has been followed, and that
the performances of the material used declared
in the above-mentioned catalogues have in no
way been jeopardized during assembling or by
any modification.


Diese Leistungen und die ausgeführten
Nachweise gestatten es daher, die Konformität
der genannten Schaltgerätekombination mit
den folgenden Anforderungen der Norm zu
erklären:

Tali prestazioni e le verifiche effettuate
consentono quindi di dichiarare la conformità
del quadro in questione alle seguenti richieste
della norma:

These performances and the verifications
carried out therefore allow us to declare
conformity of the switchgear assembly under
consideration of the following requirements of
the Standard.

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:

Managing Director


manuel.palm@baywa-re.com
23.02.2024 14:00:29



**Niederspannungs-
Schaltgerätekombinationen nach IEC
EN 61439-7**

Bauanforderungen:

- Festigkeit von Werkstoffen und Teilen der Schaltgerätekombination
- Schutzart
- Luft- und Kriechstrecken
- Schutz gegen elektrischen Schlag
- Einbau von Schaltgeräten und Bauteilen
- Innere Stromkreise und Verbindungen
- Anschlüsse für von außen eingeführte Leiter

Leistungsanforderungen:

- Isolationseigenschaften
- Erwärmung
- Kurzschlussfestigkeit
- Elektromagnetische Verträglichkeit (EMV)
- Mechanische Funktion

Wir erklären schließlich unter unserer Verantwortung, alle Stücknachweise, die von der Norm vorgesehen sind, mit positivem Ausgang ausgeführt zu haben, und zwar:

Bauanforderungen:

- Schutzgrad der Umhüllung
- Luft- und Kriechstrecken
- Schutz gegen elektrischen Schlag und die Durchgängigkeit von Schutzleiterkreisen, Einbau von Schaltgeräten und Komponenten
- Innere Stromkreise und Verbindungen
- Anschlüsse für von außen eingeführte Leiter
- Mechanische Funktion

Leistungsanforderungen:

- Isolationseigenschaften
- Verdrahtung, Leistungen bei Betriebsbedingungen und Funktionalität

Diese CE-Erklärung wurde mit Unterstützung des TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**) erstellt.
La presente dichiarazione CE è stata redatta con il support del TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**).
This CE declaration was drawn up with the support of TÜV SÜD Product Service GmbH Zertifizierstellen (**Notified Body 0123**).

CE KONFORMITÄTSERKLÄRUNG
DICHIARAZIONE DI CONFORMITÀ CE
CE DECLARATION OF CONFORMITY

**Quadri elettrici per bassa tensione
secondo IEC EN 61439-7**

Richieste di Costruzione:

- Robustezza dei materiali e delle parti del quadro
- Grado di protezione degli involucri
- Distanze d'isolamento in aria e superficiali
- Protezione contro la scossa elettrica ed integrità dei circuiti di protezione
- Installazione degli apparecchi di manovra e dei componenti
- Circuiti elettrici interni e collegamenti
- Terminali per conduttori esterni

Richieste di prestazioni:

- Proprietà dielettriche
- Sovratemperatura
- Capacità di tenuta al cortocircuito
- Compatibilità Elettromagnetica (EMC)
- Funzionamento meccanico

Dichiariamo infine, sotto la nostra responsabilità, di aver effettuato con risultato positivo tutte le prove individuali previste dalla norma e precisamente:

Specifiche di costruzione:

- Grado di protezione degli involucri
- Distanze di isolamento in aria e superficiali
- Protezione contro la scossa elettrica ed integrità dei circuiti di protezione
- Installazione dei componenti
- Circuiti elettrici interni e collegamenti
- Terminali per conduttore esterni
- Funzionamento meccanico

Specifiche di prestazione:

- Proprietà dielettriche
- Cablaggio, prestazione di condizioni operative e funzionalità



**Low voltage switchgears and
controlgear assemblies in compliance
with the Standard IEC EN 61439-7**

Constructional requirements:

- Strength of materials and parts of the assembly
- Degree of protection
- Clearances and creepage distances
- Protection against electric shock
- Incorporation of switching devices and components
- Internal electrical circuits and connections
- Terminals for external conductions

Performance requirements:

- Dielectric properties
- Temperature-rise limits
- Short-circuit withstand strength
- Electromagnetic compatibility (EMC)
- Mechanical operation

Finally, declares, under its own responsibility that all the routine verifications prescribed by the Standard have been carried out successfully and precisely:

Design specifications:

- Degree of protection of the enclosure
- Clearances and creepage distances
- Protection against electric shock an integrity of protective circuits
- Incorporation of switching devices components
- Internal electrical circuits and connections
- Terminals for external conductors
- Mechanical operation

Performance specifications:

- Dielectric properties
- Wiring, operational performance and function

Datum:
Data: 05.06.2023
Date:

Unterschrift:
Firma:
Signature:


Managing Director


Table of Figures

Figure 1: DC power equipment	17
Figure 2: Charge interface equipment.....	18
Figure 3: Order of charging points.....	19
Figure 4: DC power characteristics in different configurations.....	21
Figure 5: Cable radii for charging cables 3.5 m (left) and 5 m (right)	22
Figure 6: Standard charging height of 0.8 m	22
Figure 7: Cable management.....	24
Figure 8: Cable management range.....	24
Figure 9: HYC400 exterior	26
Figure 10: Outer dimensions of the HYC400 (in mm).....	27
Figure 11: Example of a HYC400 type plate	27
Figure 12: Half cylinder used (in mm)	28
Figure 13: Order to open the hypercharger doors	29
Figure 14: Locking mechanism for the display door	29
Figure 15: Interior view (service door side)	31
Figure 16: Interior view (display door side).....	32
Figure 17: Interior view (charging cable door side).....	33
Figure 18: Circuit diagram of the HYC400.....	35
Figure 19: Dimensions of the SiC Power-Stack.....	37
Figure 20: AC connection block	38
Figure 21: DC connection block	38
Figure 22: AC input switchgear	41
Figure 23: DC output switchgear (view from below)	42
Figure 24: DC output switchgear (view from above).....	42
Figure 25: Position of the CTRL_COM in the hypercharger	44
Figure 26: CTRL_COM	45
Figure 27: Display module	46
Figure 28: Position of the CTRL_EXT in the hypercharger.....	47
Figure 29: Cooling unit for one cooled charging cable (optional).....	48
Figure 30: Position of the external emergency stop relay in the hypercharger	49
Figure 31: Connection options for external emergency stop.....	50
Figure 32: Dimensions of the barrier-free hypercharger (in mm)	51
Figure 33: HYC400 cardboard packaging	52
Figure 34: HYC400 wood packaging.....	53
Figure 35: Vertical transport with forklift	54
Figure 36: Position of the lifting eyes and maximum lifting strap angle.....	55
Figure 37: Procedure for unpacking the hypercharger	57
Figure 38: Recommended minimum distances for site preparation	61
Figure 39: hypercharger concrete foundation (dimensions in cm)	63
Figure 40: HYC400 on concrete foundation	64
Figure 41: Mains cable bending radius	65
Figure 42: Packaging of base including cable entry plate.....	66
Figure 43: Base including cable entry plate (in mm).....	66
Figure 44: Alignment of base on the foundation	67
Figure 45: Distances between the base and the external dimensions of the HYC400	68
Figure 46: Cable jig for preparing the mains cable	69
Figure 47: Tighten cable glands	70
Figure 48: Positioning and attaching the HYC400 on the base	71
Figure 49: Brass sleeves on the cable jig.....	72
Figure 50: Fastening the cable lugs	73
Figure 51: Screw connection of the mains cables to the conductor rails (in mm).....	73

Figure 52: Side view of the mains cable connection.....74

List of tables

Table 1: Overview of DC power & charge interfaces	17
Table 2: Charging interfaces	19
Table 3: Additional charging interfaces for automotive multi-chargers.....	20
Table 4: Possible combinations of charging interfaces.....	20
Table 5: Possible distributions of output power	25
Table 6: HYC400 components (service door side)	31
Table 7: HYC400 components (display door side)	32
Table 8: HYC400 components (charging cable door side)	33
Table 9: HYC400 circuit diagram legend.....	36
Table 10: SiC Power-Stack technical data	39
Table 11: Mechanical data.....	39
Table 12: Electrical connection data of AC connection.....	39
Table 13: Electrical connection data DC connection	39
Table 14: Components of the AC input switchgear	41
Table 15: Components of the DC output switchgear	43
Table 16: Display properties	46
Table 17: Weight calculation for HYC400.....	53
Table 18: Dimensions	65
Table 19: Available cable glands on the hypercharger base	67
Table 20: Distances from base to external dimensions of HYC400	68
Table 21: Checks to be carried out during commissioning	77
Table 22: Standard IP address of the hypercharger	78
Table 23: Error description and correction	79
Table 24: Annual maintenance work.....	82
Table 25: General technical data	85
Table 26: Mechanical data.....	85
Table 27: Electrical Connection Data.....	86
Table 28: Frequency bands and transmission levels.....	86
Table 29: No-load power dissipation at 400 V AC	86